

User Manual

WISE-4000 Series

IoT Ethernet I/O Module



Copyright

The documentation and the software included with this product are copyrighted 2015 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgements

Intel and Pentium are trademarks of Intel Corporation.

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

Product Warranty

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For outof-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

- 1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
- 2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
- 3. If your product is diagnosed as defective, obtain an RMA (return merchandize authorization) number from your dealer. This allows us to process your return more quickly.
- 4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
- 5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Part No. 2003D40003 Printed in Taiwan Edition 4 May 2016

Declaration of Conformity

CE

This product has passed the CE test for environmental specifications. We recommend the use of shielded cables.

FCC Class A

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

KC

해당 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된서비스는 할 수 없 습니다

Trade name or Applicant name: Advantech Equipment name: IoT Wireless I/O Module Basic model name:

WISE-4012

■ WISE-4050

Certificate number:

WISE-4012: MSIP-CRM-AK0-WISE-4012

WISE-4050: MSIP-CRM-AK0-WISE-4050

Manufacture / Country of Origin: Advantech Taiwan

The date for certificate issue: 2016

Type of identification: Wi-Fi I/O

Technical Support and Assistance

- 1. Visit the Advantech web site at www.advantech.com/support where you can find the latest information about the product.
- 2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Safety Instructions

- 1. Read these safety instructions carefully.
- 2. Keep this User Manual for later reference.
- 3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
- 4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
- 5. Keep this equipment away from humidity.
- 6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
- 7. The openings on the enclosure are for air convection. Protect the equipment from overheating. DO NOT COVER THE OPENINGS.
- 8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- 9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
- 10. All cautions and warnings on the equipment should be noted.
- 11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
- 12. Never pour any liquid into an opening. This may cause fire or electrical shock.
- 13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
- 14. If one of the following situations arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well, or you cannot get it to work according to the user's manual.
 - The equipment has been dropped and damaged.
 - The equipment has obvious signs of breakage.
- 15. DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -20° C (-4° F) OR ABOVE 60° C (140° F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.
- 16. CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER, DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.
- 17. The sound pressure level at the operator's position according to IEC 704-1:1982 is no more than 70 dB (A).

DISCLAIMER: This set of instructions is given according to IEC 704-1. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

Contents

Chapter	1	Product Overview	.1
	1.1	Introduction	2
	1.2	Feature Highlights	2
		1.2.1 RESTful Web Service	2
		1.2.2 Data Storage Function	3
		1.2.3 IoT Cloud Function	3
	1.3	Series Family and Specifications	4
		1.3.1 Series Family	4
	1.4	Mechanical Design and Dimensions	5
		1.4.1 WISE-4000 Wireless Series Dimensions	5
		1.4.2 WISE-4000/LAN Dimensions	5
	1.5	Switch	6
	1.6	LED Definition	6
	1.7	Certification and Safety Standard	7
	1.8	Package Information	8
Chapter	2	Product Specifications	.9
Chapter	2 2.1	Product Specifications	.9
Chapter	2 2.1 2.2	Product Specifications General Specifications WISE-4010/LAN	.9 . 10 . 12
Chapter	2 2.1 2.2	Product Specifications General Specifications WISE-4010/LAN 2.2.1 I/O Specification	. 10 . 12 . 12
Chapter	2 2.1 2.2	Product Specifications General Specifications WISE-4010/LAN 2.2.1 I/O Specification 2.2.2 Application Wiring	. 10 . 12 . 12 . 13
Chapter	2 2.1 2.2	Product Specifications General Specifications WISE-4010/LAN 2.2.1 I/O Specification 2.2.2 Application Wiring Figure 2.1 WISE-4010/LAN Current Input Wiring Diagram	. 10 . 12 . 12 . 13 . 13
Chapter	2 2.1 2.2	Product Specifications General Specifications WISE-4010/LAN 2.2.1 I/O Specification 2.2.2 Application Wiring Figure 2.1 WISE-4010/LAN Current Input Wiring Diagram Figure 2.2 WISE-4010/LAN Digital Output Wiring Diagram	. 10 . 12 . 12 . 13 . 13 . 13
Chapter	2 2.1 2.2	Product Specifications General Specifications WISE-4010/LAN 2.2.1 I/O Specification 2.2.2 Application Wiring Figure 2.1 WISE-4010/LAN Current Input Wiring Diagram Figure 2.2 WISE-4010/LAN Digital Output Wiring Diagram 2.2.3 Pin Assignment	. 10 . 12 . 12 . 13 . 13 . 13 . 13 . 14
Chapter	2 2.1 2.2	General Specifications WISE-4010/LAN 2.2.1 I/O Specification 2.2.2 Application Wiring Figure 2.1 WISE-4010/LAN Current Input Wiring Diagram Figure 2.2 WISE-4010/LAN Digital Output Wiring Diagram 2.2.3 Pin Assignment Figure 2.3 WISE-4010/LAN Pin Assignment	. 10 . 12 . 12 . 13 . 13 . 13 . 14 . 14
Chapter	2 2.1 2.2	Product Specifications General Specifications WISE-4010/LAN 2.2.1 I/O Specification 2.2.2 Application Wiring Figure 2.1 WISE-4010/LAN Current Input Wiring Diagram Figure 2.2 WISE-4010/LAN Digital Output Wiring Diagram 2.2.3 Pin Assignment Figure 2.3 WISE-4010/LAN Pin Assignment 2.2.4 Block Diagram	. 10 . 12 . 12 . 13 . 13 . 13 . 13 . 14 . 14 . 14
Chapter	2 2.1 2.2	Product Specifications General Specifications WISE-4010/LAN 2.2.1 I/O Specification 2.2.2 Application Wiring Figure 2.1 WISE-4010/LAN Current Input Wiring Diagram Figure 2.2 WISE-4010/LAN Digital Output Wiring Diagram 2.2.3 Pin Assignment Figure 2.3 WISE-4010/LAN Pin Assignment 2.2.4 Block Diagram Figure 2.4 WISE-4010/LAN Block Diagram	. 10 . 12 . 12 . 13 . 13 . 13 . 13 . 14 . 14 . 14
Chapter	2 2.1 2.2	Product Specifications General Specifications WISE-4010/LAN 2.2.1 I/O Specification 2.2.2 Application Wiring Figure 2.1 WISE-4010/LAN Current Input Wiring Diagram Figure 2.2 WISE-4010/LAN Digital Output Wiring Diagram 2.2.3 Pin Assignment Figure 2.3 WISE-4010/LAN Pin Assignment 2.2.4 Block Diagram Figure 2.4 WISE-4010/LAN Block Diagram WISE-4050/LAN WISE-4050/LAN	. 10 . 12 . 12 . 13 . 13 . 13 . 14 . 14 . 14 . 14 . 14
Chapter	2 2.1 2.2	General Specifications WISE-4010/LAN 2.2.1 I/O Specification 2.2.2 Application Wiring Figure 2.1 WISE-4010/LAN Current Input Wiring Diagram Figure 2.2 WISE-4010/LAN Digital Output Wiring Diagram 2.2.3 Pin Assignment Figure 2.3 WISE-4010/LAN Pin Assignment 2.2.4 Block Diagram Figure 2.4 WISE-4010/LAN Block Diagram WISE-4050/LAN 2.3.1 I/O Specification	. 10 . 12 . 12 . 13 . 13 . 13 . 13 . 14 . 14 . 14 . 14 . 14 . 14

	2.3.1	I/O Specification	14
	2.3.2	Application Wiring	15
		Figure 2.5 WISE-4050/LAN Digital Input Wiring Diagram	15
		Figure 2.6 WISE-4050/LAN Digital Output Wiring Diagram	15
	2.3.3	Pin Assignment	16
		Figure 2.7 WISE-4050/LAN Pin Assignment	16
	2.3.4	Block Diagram	16
		Figure 2.8 WISE-4050/LAN Block Diagram	16
2.4	WISE-	-4060/LAN	17
	2.4.1	I/O Specification	17
	2.4.2	Application Wiring	18
		Figure 2.9 WISE-4060/LAN Digital Input Wiring Diagram	18
		Figure 2.10WISE-4060/LAN Relay Output Wiring Diagram	18
	2.4.3	Pin Assignment	19
		Figure 2.11WISE-4060/LAN Pin Assignment	19
	2.4.4	Block Diagram	19
		Figure 2.12WISE-4060/LAN Block Diagram	19
2.5	WISE-	-4012E	20
	2.5.1	I/O Specification	20
	2.5.2	Application Wiring	22
		Figure 2.13WISE-4012E Voltage Input Wiring Diagram	22

3	Har	dware Installation	35
		Figure 2.35WISE-4060 Block Diagram	34
	2.9.4	Block Diagram	34
		Figure 2.34WISE-4060 Pin Assignment	33
	2.9.3	Pin Assignment	33
		Figure 2.33WISE-4060 Relay Output Wiring Diagram	33
	2.0.2	Figure 2.32WISE-4060 Digital Input Wiring Diagram	
	2.9.2	Application Wiring	
2.0	291	I/O Specification	
29	WISE.	-4060	31 32
	2.0.4	Figure 2.31WISE-4051 Block Diagram	۲ ۲۹
	201	Figure 2.300015E-4051 Pin Assignment	31 24
	∠.ၓ.૩	Fin Assignment	13 ءە
	202	רועטופ 2.29אס-40ס צפור Wiring Diagram	31 24
		30 Figure 2.2000 405 Dort Wiring Diagram	ayıam
		30 Figure 2 28WISE-4051 Digital Input Wet Contact Wiring D	iagram
		Figure 2.27WISE-4051 Digital Input Dry Contact Wiring Di	agram.
	2.8.2	Application Wiring	30
	2.8.1	I/O Specification	29
2.8	WISE	-4051	
	2.7.4	Figure 2.26WISE-4050 Block Diagram	
	274	Block Diagram	20 29
	2.7.3	Figure 2 25WISE-4050 Pin Assignment	∠o 28
	273	Pin Assignment	∠0 28
		Figure 2.23WISE-4050 Digital Input Wiring Diagram	28 29
	2.1.2	Application Wiring	
	2.7.1	I/U Specification	
2.7	WISE	-4050	27
o –		Figure 2.22WISE-4012 Block Diagram	
	2.6.4	Block Diagram	26
		Figure 2.21WISE-4012 Pin Assignment	26
	2.6.3	Pin Assignment	26
		Figure 2.20WISE-4012 Digital Output Wiring Diagram	25
		Figure 2.19WISE-4012 Digital Input Wiring Diagram	25
		Figure 2.18WISE-4012 Analog Input Wiring Diagram	
	2.6.2	Application Wiring	
2.0	2.6.1	I/O Specification	
2.6	WISE	-4012	23
	2.5.4	Figure 2 17W/ISE-4012E Block Diagram	23 23
	254	Rlock Diagram	23 23
	2.0.0	Fin Assignment	
	252	Pigure 2.15WISE-4012E Relay Output Winny Diagram	22
		Figure 2.14WISE-4012E Digital Input Wiring Diagram	22

terfa	ce Introducti	on	36
ounti	ing		36
2.1	DIN-Rail M	ounting	36
	Figure 3.1	Mounting Kit Back View	36
	Figure 3.2	Installing the Mounting Kit for a DIN-Rail	36
	Figure 3.3	Mounting on the DIN-Rail	37
	Figure 3.4	Rear View of DIN-Rail Mounting	37
	erfa ounti 2.1	erface Introducti ounting 2.1 DIN-Rail M Figure 3.1 Figure 3.2 Figure 3.3 Figure 3.4	erface Introduction bunting 2.1 DIN-Rail Mounting Figure 3.1 Mounting Kit Back View Figure 3.2 Installing the Mounting Kit for a DIN-Rail Figure 3.3 Mounting on the DIN-Rail Figure 3.4 Rear View of DIN-Rail Mounting

3.1 3.2

Chapter

		3.2.2 Wall Mounting	38
		Figure 3.5 Mounting Kit Dimensions	38
		Figure 3.6 Wall Mounting	39
		Figure 3.7 Wall Mounting Finished	39
		3.2.3 Stack Mounting	40
		Figure 3.8 Stack Mounting	40
		Figure 3.9 Finished Stack Mounting	40
	3.3	Wiring & Connections	41
		3.3.1 Power Supply Wiring (Not for WISE-4012E)	41
		Figure 3.10Power Supply Wiring	41
		3.3.2 USB Power (WISE-4012E Only)	41
		Figure 3.11USB Power Supply Wiring	42
		3.3.3 I/O Units	42
Chapter	4	System Configuration	43
	4.1	Connection	44
	4.2	Configure WISE Using the Web Interface	44
		4.2.1 System Requirements	44
		4.2.2 List of WISE-4000 Default Ethernet Ports	45
		4.2.3 Factory Default Settings	45
		4.2.4 Module Authorization	45
		4.2.5 Operation Mode	45
		4.2.6 Using a Browser to Configure the Module	46
		4.2.7 Configuring the RS-485 Port of WISE-4051	61
		Figure 4.1 Application Scenario of WISE-4051 RS-485 Port w	ith 66
		Table 4.1: Application Scenario of WISE-4051 RS-485 Port w	00 /ith
		ADAM-4000 Modbus I/O Module	67
		4.2.8 Configuring Cloud Server (WISE-4000 wireless series only)	
	43	Configure WISE-4000 with ADAM NET Litility	82
	1.0	4 3 1 Operation Framework	
		4.3.2 Configure WISE-4000	02
	ΔΔ	Site Survey Tool for WISE-4000 Wireless Series	
	7.7	1 / 1 Site Survey Architecture	50 00
		1.4.2 Site Survey Mode	30 00
		4.4.2 Site Survey Tool	
		4.4.5 Sile Survey 100i	91
Appendi	хA	I/O Modbus Mapping Table	93
	A.1	Modbus Function Code Introduction	94
	A.2	WISE-4010/LAN Modbus Mapping Table	94
	A.3	WISE-4050/LAN Modbus Mapping Table	98
	A.4	WISE-4060/LAN Modbus Mapping Table	100
	A.5	WISE-4012E Wireless Modbus Mapping Table	102
	A.6	WISE-4012 Wireless Modbus Mapping Table	105
	A.7	WISE 4051 Wireless Modbus Mapping Table	110
	A.8 A.9	WISE-4060 Wireless Modbus Mapping Table	114
Appendi	хB	REST for WISE-4000 Series1	17
	B.1	Introduction	. 118
	B.2	REST Resources for WISE-4000 Series	119
	·	B.2.1 Digital Input	.119
			-

B.2.2	Digital Output	124
B.2.3	Analog Input	129
B.2.4	RS-485 Port Expansion Data	135
B.2.5	Data Logger	143



Product Overview

1.1 Introduction

WISE-4000 series is an Ethernet-based wired or wireless IoT device, which integrated with IoT data acquisition, processing, and publishing functions. Except various I/O type offering, WISE-4000 series provides data pre-scaling, data logic, and data logger functions. These data can be access via mobile devices and be published to cloud with security in anytime and anywhere.



1.2 Feature Highlights

1.2.1 RESTful Web Service

Representational State Transfer (REST) is a software architecture style widely used for creating scalable web services. With the advantage of scalability, simplicity and performance, it's already adopted in IoT applications. It is based on Hypertext Transfer Protocol (HTTP) and uses verbs, like GET, POST, PUT, DELETE, etc., for web browsers to get web pages or retrieve data with remote servers. The data can be retrieved by internet media like HTML, XML, or JSON. REST s a uniform resource identifier (URI) to identify the data. Like using "http://10.0.0.1/analoginput/ch0" to identify the analog input value of channel 0. Then the web server may retrieve a JSON file analog input value of channel 0.



1.2.2 Data Storage Function

The internal flash of the WISE module can log up to 10,000 data samples with a time stamp. The I/O data can be logged periodically, and when the I/O status changes. Once the memory is full, users can choose to overwrite the old data to ring log or just stop the log function. When the module is powered-off, data can be kept in the module. When restarting, users can decide whether to clear all data or continue logging.

The definition of data in the IoT is not only the status of everything, but also includes time or location information. With a built-in Real Time Clock (RTC), WISE modules log data with a time stamp and the MAC address of the WISE module. The internal RTC can be calibrated by SNTP with time server. Once the module has been powered-off, the internal time can also be saved using the time backup battery. When users poll the data from the data logger, the time stamp will always be attached to the data.



1.2.3 IoT Cloud Function

Local storage data not only can be polled by the user, it can also be pushed to the cloud automatically. Once the logger reaches the upload criteria, Data Logger will push the data to public cloud services like Dropbox or Baidu. This data will be saved on the cloud using a *.csv file extension. Users can synchronize the data on the cloud using the application program provided by the cloud provider where it can be accessed from anywhere. With the provided RESTful API, users can configure their private cloud and push the data onto it. Cloud Logger provides a very flexible solution for cloud data storage. A WISE module is the only one stop from data acquisition to the cloud.



1.3 Series Family and Specifications

1.3.1 Series Family

Interface	Model	Description			
	WISE-4012E	6-ch Input/Output IoT Wireless I/O Module for IoT Developers			
	WISE-4012	4-ch Universal Input and 2-ch Digital Output IoT Wireless I/O Module			
WLAN	WISE-4050	4-ch Digital Input and 4-ch Digital Output IoT Wireless I/O Module			
	WISE-4051	8-ch Digital Input IoT Wireless I/O Module with 1-port RS-485			
	WISE-4060	4-ch Digital Input and 4-ch Relay Output IoT Wireless I/O Module			
	WISE-4010/LAN	4-ch Current Input and 4-ch Digital Output IoT Ethernet I/O Module			
LAN	WISE-4050/LAN	4-ch Digital Input and 4-ch Digital Output IoT Ethernet I/O Module			
	WISE-4060/LAN	4-ch Digital Input and 4-ch Relay Output IoT Ethernet I/O Module			

1.4 Mechanical Design and Dimensions

1.4.1 WISE-4000 Wireless Series Dimensions











1.5 Switch

Switch	Description	Position	ON (Default)	OFF
SW/1	Operation Mode	P1	Normal Mode	Initial Mode
3001	Operation Mode	P2	N/A	N/A
SW/2	DI Type	P1	Dry Contact	Wet Contact
3002	(Ch0~3)	P2	Dry Contact	Wet Contact
S/M/2	DI Type	P1	Dry Contact	Wet Contact
3003	(Ch4~7)	P2	Dry Contact	Wet Contact

Note 1 After the position 1 of SW1 been changed, user need to power on the module again to apply the operation mode

Note 2 SW2 is for WISE-4051, WISE-4050(/LAN), and WISE-4060(/LAN), all 4 channels have to be configured to dry contact or wet contact in the same time, and both P1 and P2 have to be changed together

Note 3 SW3 is for WISE-4051 only, all 4 channels have to be configured to dry contact or wet contact in the same time, and both P1 and P2 have to be changed together

1.6 LED Definition

WISE-4000 Wireless Series

LED	Color	Indication	Behavior
Status	Green	Blink	2Hz: Wait for connection 0.5Hz: Network Connected
		ON 30 Sec	When enable LOCATE function.
Com	Yellow	Blink	When TX/RX data in transmission
	Green	ON	Limited AP Mode
AP/Inira		OFF	Station Mode
		ON *4	Full Signal
.		ON *3	Good Signal
Signal	Green	ON *2	Okay Signal
Suengui		ON *1	Poor Signal
		All OFF	No Signal/ Limited AP Mode

WISE-4051 Only

LED	Color	Indication	Behavior
Tx	Yellow	Blink	RS-485 port is transmitting data
Rx	Green	Blink	RS-485 port is receiving data

WISE-4000/LAN Series

LED	Color	Indication	Behavior
Status	Croop	Blink	Module is normally at work. (1Hz)
	Green	ON 30 Sec	When enable LOCATE function.
Com	Yellow	Blink	When TX/RX data in transmission
Link	Green	ON	Both ends of devices are connected
Speed	Yellow	ON/OFF	ON: 100 Mbps OFF: Less than 10 Mbps

1.7 Certification and Safety Standard

WISE-4000/LAN Series

- FCC
 - FCC Part 15 Class A
 - IC ICES-003
- CE
 - EN 55011 (Group 1, CLASS A)
 - EN 55022
 - EN 61000-6-4
 - EN 61000-6-2
 - IEC 61000-4-2
 - IEC 61000-4-3
 - IEC 61000-4-4
 - IEC 61000-4-5
 - IEC 61000-4-6
 - IEC 61000-4-8
 - IEC 61000-4-11
 - RoHS
- China RoHS

WISE-4000 Wireless Series

- FCC
 - FCC Part 15 Class A
 - IC ICES-003
- CE
 - EN 55011 (Group 1, CLASS A)
 - EN 55022
 - EN 61000-6-4
 - EN 61000-6-2
 - IEC 61000-4-2
 - IEC 61000-4-3
 - IEC 61000-4-4
 - IEC 61000-4-5
 - IEC 61000-4-6
 - IEC 61000-4-8
 - IEC 61000-4-11
 - RoHS
- NCC
- SRRC
- China RoHS

1.8 Package Information

WISE-4000 Wireless Series

- WISE-4000 Module with bundle antenna and terminal connector x1
- Mounting bracket x1
- Quick startup manual with China RoHS declare

WISE-4000/LAN Series

- WISE-4000/LAN Module
- Mounting bracket x1
- Quick startup manual with China RoHS declare

WISE-4012

- WISE-4000 Module with bundle antenna and terminal connector x1
- Mounting bracket x1
- Quick startup manual with China RoHS declare
- 1200hm precise resistors

WISE-4012E

- WISE-4012E Module with bundle antenna and terminal connector x1
- Quick startup manual with China RoHS declare
- USB drive with WebAccess (WISE-4012E-AE-WA only)
- USB power cable
- Extension board
- Screwdriver



Product Specifications

2.1 General Specifications

WLAN Interface

- Standard Conformance:
 - 802.11b
 - 802.11g
 - 802.11n (2.4GHz only)
- Network Modes:
 - Limited AP (Wireless Server)
 - Station/Infrastructure (Wireless Client)
- Transmission Distance: 110 meters (In open areas with bundled external antenna)
- Wireless Security: WPA2 Personal & Enterprise
- Transmit Power
 - 802.11b: 15.00 dBm
 - 802.11g: 16.45 dBm
 - 802.11n: 16.39 dBm
- Antenna
 - Connector: Reverse SMA
 - Gain (Peak): 3.26 dBi

LAN Interface (WISE-4000/LAN Series)

- Ethernet: IEEE 802.3u 10/100Base-T(X)
- Connector: 1-port RJ-45

General

- I/O Connector: 3.5mm spacing, 15-pole, plug-in screw terminal block
- Power Connector: Micro-B USB for WISE-4012E, other modules use same connector as I/O
- Watchdog Timer
 - System: 1.6 second
 - Communication
 - Programmable (FSV)
- RTC Accuracy: 3 min/month (WISE-4012E does not provide RTC)
- Enclosure: PC
- Mounting: DIN 35 rail, wall, and stack
- Dimensions (W x H x D)
 - With bundle antenna: 80 x 148 x 25 mm
 - Without bundled antenna: 80 x 89 x 25 mm
- Operation Temperature:
 - WISE-4000 Wireless Series: -25~70°C (-13~158°F)
 - WISE-4000/LAN Series: -40~70°C (-40~158°F)
- Cold Start Temperature
 - WISE-4000 Wireless Series: -20~70°C (-4~158°F)
 - WISE-4000/LAN Series: -40~70°C (-40~158°F)
- Storage Temperature: -40~85°C (-40~185°F)
- Operating Humidity: 20~ 95% RH (non-condensing)

Storage Humidity: 0~95% RH (non-condensing)

Note!

Equipment will operate below 30% humidity. However, static electricity problems occur much more frequently at lower humidity levels. Make sure you take adequate precautions when you touch the equipment. Consider using ground straps, anti-static floor coverings, etc. if you use the equipment in low humidity environments.

Power

- Power Input Voltage
 - WISE-4012E: USB 5VDC
 - WISE-4012: 10~30 VDC (24 VDC Standard)
 - WISE-4050: 10~30 VDC (24 VDC Standard)
 - WISE-4051: 10~30 VDC (24 VDC Standard)
 - WISE-4060: 10~30 VDC (24 VDC Standard)
 - WISE-4010/LAN: 10~30 VDC (24 VDC Standard)
 - WISE-4050/LAN: 10~30 VDC (24 VDC Standard)
 - WISE-4060/LAN: 10~30 VDC (24 VDC Standard)
- Power Consumption
 - WISE-4012E: 2.2 W @ 5 VDC
 - WISE-4012: 2.5 W @ 24 VDC
 - WISE-4050: 2.2 W @ 24 VDC
 - WISE-4051: 2.2 W @ 24 VDC
 - WISE-4060: 2.5 W @ 24 VDC
 - WISE-4010/LAN: 1.2 W @ 24 VDC
 - WISE-4050/LAN: 2.2 W @ 24 VDC
 - WISE-4060/LAN: 2.5 W @ 24 VDC
- Reverse Power Protection (not for WISE-4012E)

Software

- Configuration Interface: Web Interface, Windows Utility
- Utility: WISE-4000/Apax .NET Utility
- Driver: WISE-4000 .NET Class Library
- Industrial Protocol: Modbus/TCP
- Supported Protocols: TCP/IP, UDP, HTTP, HTTPS, DHCP, ARP, SNTP
- Supports RESTful Web API in JSON format
- Supports Web Server in HTML5 with JavaScript & CSS3

RTC Accuracy: 3 min/month (WISE-4012E does not provide RTC)



2.2 WISE-4010/LAN

2.2.1 I/O Specification

- Current Input
 - Channel: 4
 - Resolution: 12-bit
 - Sampling Rate: 10/100 Hz/channel
 - Accuracy: ±0.2% of FSR @ 25°C
 - Input Range: 0~20 mA, 4~20 mA (Select by Web Configuration)
 - Input Impedance: 120 Ω
 - Burn-out Detection: Yes (4~20 mA only)
 - Supports Data Scaling and Averaging
- Digital Output
 - Channels: 4
 - -Open collector to 30 V, 400 mA max. for resistance load
 - Inductive loads require an external diode to eliminate back-EMF when the DO is turned off
 - On Resistance ($R_{DS(ON)}$): 0.7 Ω (max.) @ 400mA, 25°C, 10V
 - Supports 5 kHz Pulse Output
 - Supports High-to-Low and Low-to-High Delay Output

2.2.2 Application Wiring



Figure 2.1 WISE-4010/LAN Current Input Wiring Diagram



Figure 2.2 WISE-4010/LAN Digital Output Wiring Diagram

2.2.3 Pin Assignment



Figure 2.3 WISE-4010/LAN Pin Assignment

2.2.4 Block Diagram



Figure 2.4 WISE-4010/LAN Block Diagram

2.3 WISE-4050/LAN

2.3.1 I/O Specification

- Digital Input
 - Channel: 4
 - Logic level
 - -Dry Contact 0: Open

1: Close to DI COM

–Wet Contact 0: 0~3 V_{DC} or -3~0 V_{DC}

1: 10~30 V_{DC} or -30~-10 V_{DC} (3 mA min.)

 –All 4 channels should be configured to dry contact or wet contact in the same time

- Isolation: 3,000 V_{rms}
- Supports 32-bit Counter Input Function (Maximum signal frequency 3 kHz)
- Keep/Discard Counter Value when Power-off
- Supports Frequency Input Function (Maximum frequency 3 kHz)
- Supports Inverted DI Status

Digital Output

- Channels: 4
 - Open collector to 30 V, 400 mA max. for resistance load
 - Inductive loads require an external diode to eliminate back-EMF when the DO is turned off
- Isolation: 3,000 V_{rms}
- On Resistance (R_{DS(ON)}): 0.7 Ω (max.) @ 400mA, 25°C, 10V
- Supports 5 kHz Pulse Output
- Supports High-to-Low and Low-to-High Delay Output

2.3.2 Application Wiring







Figure 2.6 WISE-4050/LAN Digital Output Wiring Diagram

2.3.3 Pin Assignment



2.3.4 Block Diagram





2.4 WISE-4060/LAN

2.4.1 I/O Specification

- Digital Input
 - Channel: 4
 - Logic level
 - Dry Contact 0: Open
 - 1: Close to DI COM
 - Wet Contact 0: 0~3 V_{DC} or -3~0 V_{DC}
 - 1: 10~30 V_{DC} or -30~-10 V_{DC} (3 mA min.)
 - Isolation: 3,000 V_{rms}
 - Supports 32-bit Counter Input Function (Maximum signal frequency 3 kHz)
 - Keep/Discard Counter Value when Power-off
 - Supports Frequency Input Function (Maximum frequency 3 kHz)
 - Supports Inverted DI Status

Relay Output

- Channels: 4 (Form A)
- Contact Rating (Resistive Load)
 - –250 V_{AC} @ 5 A
 - -30 V_{DC} @ 3 A
- Relay On Time: 10 ms
- Relay Off Time: 5 ms
- Insulation Resistance: 1 G Ω min. @ 500 V_{DC}
- Dielectric Strength
 - –Between Contacts: 1000 V_{AC} (1min)
 - -Between Coil to Contact: 3000 V_{AC} (1min)
- Maximum Switching: 60 operations/minute
- Supports Pulse Output
- Supports High-to-Low and Low-to-High Delay Output

2.4.2 Application Wiring



Figure 2.9 WISE-4060/LAN Digital Input Wiring Diagram



Figure 2.10 WISE-4060/LAN Relay Output Wiring Diagram

2.4.3 Pin Assignment



Figure 2.11 WISE-4060/LAN Pin Assignment

2.4.4 Block Diagram



2.5 WISE-4012E

2.5.1 I/O Specification

- Voltage Input
 - Channel: 2
 - Resolution: 12-bit
 - Sampling Rate: 10 Hz (Total)
 - Accuracy: ±0.1 V_{DC}
 - Input Range: 0~10 V_{DC}
 - Input Impedance: 100 k Ω
 - Supports Data Scaling and Averaging
- Digital Input
 - Channel: 2
 - Logic level
 - -Dry Contact 0: Open
 - 1: Close to GND
 - Supports 32-bit Counter Input Function (Maximum signal frequency 3 kHz)
 - Keep/Discard Counter Value when Power-off
 - Supports Frequency Input Function (Maximum frequency 3 kHz)
 - Supports Inverted DI Status
- Relay Output
 - Channels: 2 (Form A)
 - Contact Rating
 - –120 V_{AC} @ 0.5 A
 - -30 V_{DC} @ 1A
 - Relay On Time: 5 ms
 - Relay Off Time: 6 ms
 - Insulation Resistance: 1 G Ω min. @ 500 V_{DC}
 - Dielectric Strength
 - Between Contacts: 1000 V_{AC} (1min)
 - Between Coil to Contact: 1500 V_{AC} (1min)
 - Maximum Switching: 60 operations/minute
 - Supports Pulse Output
 - Supports High-to-Low and Low-to-High Delay Output

Note!

The analog input channels of the WISE-4012E do not support 50/60 Hz noise rejection. The following methods can help to reduce noise:



- Power up WISE-4012E by power bank
- Supply sensor power by battery
- Wiring V0- and V1- pin to GND pin

Note!	

The analog input channel of the WISE-4012E does not support inverted voltage protection, note that the input voltage should within $0 \sim 10V_{DC}$

2.5.2 Application Wiring



Figure 2.13 WISE-4012E Voltage Input Wiring Diagram







Figure 2.15 WISE-4012E Relay Output Wiring Diagram



Figure 2.16 WISE-4012E Pin Assignment

2.5.4 Block Diagram





2.6 WISE-4012

2.6.1 I/O Specification

- Universal Input
 - Channel: 4
 - Resolution: 16-bit
 - Sampling Rate* -Universal Input 10Hz (Total)
 - 2Hz (Per Channel)
 - -Digital Input Accuracy

-Voltage

-Current

- Current Input

-Voltage -Current

- ±0.1% of FSR
- ±0.2% of FSR**
- Input Type and Range
- Voltage Input ±150mV, ±500mV, ±1V, ±5V, ±10V,
 - 0~150mV, 0~500mV, 0~1V, 0~5V, 0~10V,
 - 0~20mA, 4~20mA, ±20mA
- Digital Input 0: Open (Resistance > $1.5k\Omega$) (Dry Contact)
 - 1: Close to GND (Resistance < 300 Ω)
- Input Impedance:
- >10M Ω
- 120 Ω (Need external resistor**)
- Burn-out Detection for 4~20 mA input range
- Supports Data Scaling and Averaging

* When the universal channel been configured as digital input, it will also share the sampling rate of analog input. And please be noted that the maximum sampling rate of digital input is 2Hz.

** For accuracy assurance in current mode, please use the 120 Ω precise resistors in the package list.

- **Digital Output**
 - Channel: 2
 - Open collector to 30 V, 400 mA max. for resistance load
 - Inductive loads require an external diode to eliminate back-EMF when the DO is turned off
 - Isolation: 3,000 Vrms
 - On Resistance (R_{DS(ON)}): 0.7 Ω (max.) @ 200mA, 25°C, 5V
 - Supports 5 kHz Pulse Output
 - Supports High-to-Low and Low-to-High Delay Output

2.6.2 Application Wiring



Figure 2.18 WISE-4012 Analog Input Wiring Diagram



Figure 2.19 WISE-4012 Digital Input Wiring Diagram



Figure 2.20 WISE-4012 Digital Output Wiring Diagram

2.6.3 Pin Assignment



Figure 2.21 WISE-4012 Pin Assignment

2.6.4 Block Diagram



Figure 2.22 WISE-4012 Block Diagram

2.7 WISE-4050

2.7.1 I/O Specification

- Digital Input
 - Channel: 4
 - Logic level
 - -Dry Contact 0: Open

1: Close to DI COM

–Wet Contact 0: 0~3 V_{DC} or -3~0 V_{DC}

1: 10~30 V_{DC} or -30~-10 V_{DC} (3 mA min.)

- –All 4 channels should be configured to dry contact or wet contact in the same time
- Isolation: 3,000 V_{rms}
- Supports 32-bit Counter Input Function (Maximum signal frequency 3 kHz)
- Keep/Discard Counter Value when Power-off
- Supports Frequency Input Function (Maximum frequency 3 kHz)
- Supports Inverted DI Status
- Digital Output
 - Channels: 4
 - Open collector to 30 V, 500 mA max. for resistance load
 - Inductive loads require an external diode to eliminate back-EMF when the DO is turned off
 - Isolation: 3,000 V_{rms}
 - On Resistance ($R_{DS(ON)}$): 0.7 Ω (max.) @ 500mA, 25°C
 - Supports 5 kHz Pulse Output
 - Supports High-to-Low and Low-to-High Delay Output

2.7.2 Application Wiring









2.7.3 Pin Assignment


2.7.4 Block Diagram



Figure 2.26 WISE-4050 Block Diagram

2.8 WISE-4051

2.8.1 I/O Specification

- Digital Input
 - Channel: 8
 - Logic level
 - -Dry Contact 0: Open
 - 1: Close to DI COM
 - –Wet Contact 0: 0~3 V_{DC} or -3~0 V_{DC}

1: 10~30 V_{DC} or -30~-10 V_{DC} (3 mA min.)

- -Channel 0~3 should be configured to dry contact or wet contact in the same time
- -Channel 4~7 should be configured to dry contact or wet contact in the same time
- Isolation: 3,000 V_{rms}
- Supports 32-bit Counter Input Function (Maximum signal frequency 3 kHz)
- Keep/Discard Counter Value when Power-off
- Supports Frequency Input Function (Maximum frequency 3 kHz)
- Supports Inverted DI Status
- RS-485 Port
 - Number of Ports: 1
 - Port Connector: 3.5mm spacing plug-in screw terminal block (shared with I/O and power)
 - Baud Rate (bps): 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200
 - Data Bits:7, 8
 - Stop Bits: 1, 2
 - Parity: None, Odd, Even
 - Flow Control: Auto flow control
 - Signals: DATA+ and DATA-
 - Protection: 15 kV ESD
 - Supported Protocol:
 - -Modbus/RTU (Total 32 address by max. 8 instructions)

2.8.2 Application Wiring



Figure 2.27 WISE-4051 Digital Input Dry Contact Wiring Diagram



Figure 2.28 WISE-4051 Digital Input Wet Contact Wiring Diagram



Figure 2.29 RS-485 Port Wiring Diagram

2.8.3 Pin Assignment



Figure 2.30 WISE-4051 Pin Assignment

2.8.4 Block Diagram





2.9 WISE-4060

2.9.1 I/O Specification

- Digital Input
 - Channel: 4
 - Logic level
 - -Dry Contact 0: Open
 - 1: Close to DI COM
 - –Wet Contact 0: 0~3 V_{DC} or -3~0 V_{DC}

1: 10~30 V_{DC} or -30~-10 V_{DC} (3 mA min.)

- Isolation: 3,000 V_{rms}
- Supports 32-bit Counter Input Function (Maximum signal frequency 3 kHz)
- Keep/Discard Counter Value when Power-off
- Supports Frequency Input Function (Maximum frequency 3 kHz)
- Supports Inverted DI Status
- Relay Output
 - Channels: 4 (Form A)
 - Contact Rating (Resistive Load)
 - $-250\;V_{AC}$ @ 5 A
 - –30 V_{DC} @ 3 A
 - Relay On Time: 10 ms
 - Relay Off Time: 5 ms
 - Insulation Resistance: 1 G Ω min. @ 500 V_{DC}
 - Dielectric Strength
 - -Between Contacts: 1000 V_{AC} (1min)
 - -Between Coil to Contact: 3000 V_{AC} (1min)
 - Maximum Switching: 60 operations/minute
 - Supports Pulse Output
 - Supports High-to-Low and Low-to-High Delay Output

2.9.2 Application Wiring









2.9.3 Pin Assignment



2.9.4 Block Diagram



Figure 2.35 WISE-4060 Block Diagram



Hardware Installation

3.1 Interface Introduction

3.2 Mounting

WISE-4000 modules are designed as compact units and are allowed to be installed in the field site under the following methods.

3.2.1 DIN-Rail Mounting

The WISE-4000 module can also be fixed to the cabinet by using mounting rails. You need to assemble the DIN rail adapter to WISE-4000 module with flathead screw driver as below. When the module is mounted on a rail, you may also consider using end brackets at each end of the rail to keep the module from sliding horizontally along the rail.



Figure 3.1 Mounting Kit Back View



Figure 3.2 Installing the Mounting Kit for a DIN-Rail



Figure 3.3 Mounting on the DIN-Rail



Figure 3.4 Rear View of DIN-Rail Mounting

3.2.2 Wall Mounting

Each WISE-4000 module is packed with a plastic wall mounting bracket. User can refer the bracket dimension and assembling figure to configure an optimal placement in a wall, panel, or cabinet.



Figure 3.5 Mounting Kit Dimensions





3.2.3 Stack Mounting



Figure 3.8 Stack Mounting



Figure 3.9 Finished Stack Mounting

3.3 Wiring & Connections

This section introduces basic information on wiring the power supply, I/O units, and Ethernet connection.

3.3.1 Power Supply Wiring (Not for WISE-4012E)

The system of WISE-4000 is designed for a standard industrial unregulated 24 V_{DC} power supply. For further application, it can also accept +10 to +30 V_{DC} of power input, 200mV peak to peak of power ripple, and the immediate ripple voltage should be maintained between +10 and +30 V_{DC}.

Screw terminals +Vs and -Vs are for power supply wiring



Figure 3.10 Power Supply Wiring



! The wires used should be at least 2 mm.

3.3.2 USB Power (WISE-4012E Only)

The system of WISE-4012E IoT Developer Kit is designed for a standard Micro-B USB $5V_{DC}$ power supply. Use the provided USB power cable to power up the module. Insert the Micro-B USB end to the USB port on the side of the module, and insert another end to Type-A $5V_{DC}$ USB port such as a PC, notebook, USB power adapter, USB power bank.

Note!

B

The wider or flared part of the USB Micro-B connector is at the front side of the module, please make sure the direction of the cable before inserting it into the module to prevent the damage to the USB port.

Some USB power banks will automatically switch off, in this case, use a standard USB power instead.



Figure 3.11 USB Power Supply Wiring

3.3.3 I/O Units

The system uses a plug-in screw terminal block for the interface between I/O modules and field devices. The following information must be considered when connecting electrical devices to I/O modules.

- 1. The terminal block accepts wires from 0.5 mm to 2.5 mm.
- 2. Always use a continuous length of wire. Do not combine wires.
- 3. Use the shortest possible wire length.
- 4. Use wire trays for routing where possible.
- 5. Avoid running wires near high-energy wiring.
- 6. Avoid running input wiring in close proximity to output wiring.
- 7. Avoid creating sharp bends in the wires.



System Configuration

4.1 Connection

- 1. Plug a DC power source into the +Vs, -Vs pin of WISE module to turn the power on, or plug in the USB power cable for the WISE-4012E.
- For WISE-4000/LAN Series, connect your computer to Ethernet port of WISE module with RJ-45 cross-over Ethernet cable, and configure the IP address of your computer as same IP domain as default IP address of module: 10.0.0.1. Or the wireless router can be used for configure the WISE-4000/LAN Series by mobile devices or computer with wireless adapter.
- 3. For WISE-4000 Wireless Series, the default operation mode in normal mode is AP Mode, or you can change position 1 of SW1 to OFF as in Section 1.5, to setting the module as Initial Mode, then module must be AP Mode. Now the module can be searched by mobile devices or wireless adapter of computer with SSID: WISE-4xxx_MACAddress. Click the SSID to connect the module in AP Mode, WISE module will auto assign the IP address for mobile devices or computer.



4.2 Configure WISE Using the Web Interface

4.2.1 System Requirements

WISE-4000 module is developed by public HTML 5 base, but for detailed indication and data transmission mode may be different on Web page of the operating system. For mobile devices, the minimum requirement of web browsers as below:

- Safari 6 in Apple iOS
- Web Browser in Google Android 4.0 (Ice Cream Sandwich)
- Chrome in Google Android 4.0 (Ice Cream Sandwich)

Mobile Browse	Chrome	Android	Safari
Configuration	Y	Y	Y
File Upload	N	N	N
Data Log Chart	Y	Y	Y
Data Log Export	N	N	Ν

For PC platforms, the minimum requirement of web browsers as below:

- Internet Explorer (version 11)
- Google Chrome (version 30)
- Mozilla Firefox (version 25)

Mobile Browse	Chrome	Firefox	Safari	IE11	IE10	IE9
Configuration	Y	Y	Y	Y	Y	Y
File Upload	Y	Y	N	Y	N	N
Data Log Chart	Y	Y	Y	Y	Y	N
Data Log Export	Y	Y	N	N	N	N

4.2.2 List of WISE-4000 Default Ethernet Ports

Application	Protocol	Port	Note
WebServer	TCP	80	Configurable
Modbus Server	TCP	502	-
Search Engine	UDP	5048	-
SNTP Client	UDP	-	Randomly

4.2.3 Factory Default Settings

WISE-4000/LAN Series

- Operation Mode: Normal Mode
- IP Mode: Static IP Address
- Default IP: 10.0.0.1
- Subnet Mask: 255.0.0.0
- Default Gateway: 0.0.0.0
- Default Connection Timeout: 720 second
- HTTP Port: 80

WISE-4000 Wireless Series

- Operation Mode: Normal Mode
- Wireless Mode: AP Mode
- IP Mode: Static IP Address
- Default IP: 192.168.1.1
- Subnet Mask: 255.255.255.0
- Default Gateway: 192.168.1.1
- DHCP Server: Enabled
- Default Connection Timeout: 720 second
- HTTP Port: 80

4.2.4 Module Authorization

Account	Default Password	Access Ability
root	0000000	All the privileges
admin	0000000	All the privileges except access control configuration
user	0000000	View module status only, not allow to do configuration

4.2.5 Operation Mode

The operation mode can be configured by switch SW1 on the back of module. Please refer to previous chapter for the detail of configuring SW1.

Mode	WISE-4000/LAN Series	WISE-4000 Wireless Series
Initial Mode	Fixed IP address: 10.0.0.1	Fixed IP address: 192.168.1.1 Fixed Wi-Fi Mode: AP Mode
Normal Mode	Default IP address: 10.0.0.1	Default IP address: 192.168.1.1 Default Wi-Fi Mode: AP Mode

Advantech AE Technical Share Document

Date	2015/07/16	SR#	1-2116924166
Category	■FAQ □SOP	Related OS	N/A
Abstract	WISE-40XX, What's the fu	unction and differ	ence of AP mode and Infrastructure
ADSTRACT	Mode		
Kouword	AP mode, Infrastructure mode, Access point, Wireless network, SSID,		
Reyword	WPA/WPA2		
Related			4050 WISE 4060
Product	VVI3L-4012L, VVI3E-4012,	WISE-4010, WISE	-4050, WISE-4000

Problem Description:

This documentation explains the difference between AP mode and infrastructure mode. We will give the step by step tutorial to the customer know the system structure of these two different modes.

The detail setting procedure in the utility and WISE module will also be addressed.

Brief Solution - Step by Step:

Infrastructure Mode

In general, WISE modules stay connected to access point (AP) to be online.

Users who want to connect their mobile devices to WISE modules will need to connect to the same AP as WISE modules connected.

In this case, that access point act as a wireless switch for both Ethernet devices.



AP Mode

ADVANTECH

For configuration or doing module diagnostic, it is not necessary to have a wireless switch. WISE-4000 series offer another network mode: Limited AP Mode. Users can connect the mobile devices to access WISE module directly without an AP. When WISE-4000 work in Limited AP mode, user can find the SSID for WISE module, and

connecting to it as a wireless switch. It makes the configuration and diagnostic of WISE module much easier.

Note: In the limited AP mode, WISE can only be connected by **ONE device** at the same time.



How to connect to WISE in the AP Mode

1. Initial mode setting

When the user gets a new WISE module, or the user cannot access the WISE in the normal mode anymore, user can enter the initial mode to do the setting.

User may put **the pin 1 of switch 1** to the **"off"** position and **reboot the power** of WISE to make it enter the initial mode.

In the initial mode, the WISE will enter the limited AP mode with the following parameters:

IP: 192.168.1.1 SSID: WISE-40XX_YYYYYY Security type: open

Where XX stands for the module name of the WISE and YYYYYY is the last 6 numbers of MAC addresses of the module.

User can find the MAC address of the module on the sticker in the back of the WISE. Take the following module as the example, the SSID will be WISE-4012E F706F2



2. Connect the laptop or smart device to the WISE

AD\ANTECH

Open the wireless network device list from your laptop or smart device, and connect to the correct SSID.

For the initial mode, security type is "open", so there's no any password during the connection.



3. For initial mode, the is address is "192.168.1.1"

Open a browser like Firefox, IE and enter the default IP address, you will see the login page of the module.



Account:	root	
Password:	•••••	1

4. Login with default account and password

AD\ANTECH

You can login the module any one of the following account and the corresponding password.

Account	Default Password	Access Ability
root	0000000	All the privileges
admin	0000000	All the privileges except access control configuration
user	00000000	View module status only, not allow to do configuration

4.2.6 Using a Browser to Configure the Module

- Configure URL: http://IP_address/config
- Default URL: WISE-4000/LAN Series: http://10.0.0.1/config WISE-4000 Wireless Series: http://192.168.1.1/config
- Configuration Steps

Login Web Configuration Page		
10.0.0.1/config 1 :	1.	Wirelessly connect your smart phone to your local Ethernet network and open the browser of your smart phone
WISE-4050/LAN Web	2.	Enter IP address of module with "/ config", for example, the default URL: http://10.0.0.1/config or http://
Password:		192.168.1.1/config
Login	3.	Then you will see the login page, please enter the account and pass- word, then click Login button
	4.	After login you will see the configura- tion web page
Information		
Module		
Model Name		
WISE-4050/LAN		
WISE-4050/LAN	5.	Scroll down the tab, you can change the login user here
▲ Log Out Information		
□ Module		
WISE-4050/LAN	6.	Click the button on the top, you can switch to other pages
🚢 Root 🗸		
8 Information		
✗ Configuration		
I/O Status		
🖒 Advanced 👻		

System Information

In the information page, you can see the dashboard: module detail, network setting, and module information, including the firmware version.

Module	
Model Name	WISE-4012
Customized Name	WISE-4012
UUID	WISE-4012_00D0C9CC00DF
Location	4
	li l
Description	
Working Mode	Normal Mode
	Go to Configuration O

Module

Here you can see the naming of the module and related information. Click "Go to Configuration" to perform the configuration.

- Model Name: Indicates the WISE model
- Customized Name / UUID: Model name and UUID of the module, the default UUID is the combination of model name and the MAC address. It can be renamed.
- Location Information: You can note the location of the module
- **Description**: You can add comments on this module for easier recognition.
- Working Mode: Refer to 4.2.5 for Operation Mode

Module Information	ı		
Model Name	WISE-4012	Customized Name	WISE-4012
UUID	WISE-4012_00D0C9CC00DF		
Description			
			li li
Location Informatio	on		
Latitude	1	Longitude	2
Altitude	3		
Location	4		
			li

Wireless Status

For the WISE-4000 Wireless Series, users can check the WLAN RSSI Level to know the signal quality in Wireless Status field. And it also shows the MAC ID of the client device.

If the module is in AP Mode, the WLAN RSSI Level and Refresh button will not be shown.

Гуре	Status
WLAN RSSI Level	Good
3SSID of the Access Point	B8-55-10-86-56-18

Network Information

For the WISE-4000 Wireless Series, WLAN Mode (AP Mode / Infrastructure) will be shown in Network Information. Here is an overview of the entire network configuration. To configure the network configuration, click "Go to Configuration".

Network Informa	tion		
WLAN Mode	AP Mode		
Мас	00-D0-C9-CC-00-DF		
IP	192.168.1.1	Subnet	255.255.255.0
Gateway	192.168.1.1	IP Mode	Static DHCP
			Go to Configuration 🕤

Module Information

Here you can check the model name and the module description of the module. The firmware version will also been shown here. At the end of the configuration web page, you can see the version of the configuration web page. For normal release module, the version of configuration web page will increase with the firmware version, these have been updated at the same time.

To update the firmware version, go the "Firmware Version" section.

E Module Information						
Module Name	Module Description	Firmware Description				
WISE-4012	2-channels digital output, 4-channels universal input	Fw:A0.91 B00, Bootloader:A0.90 B00				
	Version : A1.00 B05, Copyright © 2015 By Advantech Corp.					

Network Configuration

- WLAN
 - AP Mode

When using the module in AP mode, users can configure the SSID and also decide how the WISE module works as an AP, including the security.

The "AP Mode IP Settings" is fixed and does not allow user to make their own changes.

WLAN Settings	S			
WLAN	N Mode	AP Mode		¥
SSID of the AF	P Mode	WISE-4012_CC00DF		
SSID	Hidden	Enabled/Disabled		
Countr	y Code	US		•
Operational C	hannel	11		
Securit	ty Type	Security WPA/WPA2		•
Secur	ity Key	0000000		
AP Mode IP Setting	IS			
Мас	00-D0-C9	9-CC-00-DF		
IP	192.168.1	1.1	Subnet Mask	255.255.255.0
Gateway	192.168.1	1.1	IP Mode	Static DHCP

Infrastructure Mode

When using the module in "Infrastructure Mode", users need to enter the SSID of the Access Point (AP) the WISE is going to access, and configure the security from here. WISE-4000 wireless modules provide a Second AP Setting, this is an optional setting for the WISE module to access another AP automatically. If you do not have a Second AP, you can leave the SSID blank.

After configuring the AP that the WISE module going to access, the IP address also needs to be defined in the Infrastructure-Network.

WLAN Settings	
WLAN Mode	Infrastructure Mode
	First AP Settings
SSID of the Access Point	Twifi
Security Type	Security Open

		S	econdary	AP Setting	gs (Option	al)		
SID of the Access P	int							
Security T	pe	Security Op	pen				•	
Infrastructure Mod	e IP Sett	ings						
Infrastructure Mod	e IP Sett	ings C9-CC-00-DF						
Infrastructure Mod Mac IP	e IP Sett 00-D0-0 192.168	ings C9-CC-00-DF			Subnet Mask	255.0.0		

– LAN

For WISE-4000/LAN wired module, you can select the Connection mode as DHCP or Static IP and configure the IP address, Subnet address, and Default gateway.

Мас	00-D0-C9-F6-E8-20		
IP	172.18.3.82	Subnet	255.255.255.0
Gateway	172.18.3.254	IP Mode	Static DHCP

IO Statu – UI

For the **WISE-4012**, there are four universal input channels which can be configured as **Analog Input** (AI) or **Digital Input** (DI). Before using the universal input channels, you need to configure the universal input channels to be AI or DI here.

UI Setting AI	DI DO	
Universal Input (• Use below cor • Mode can not	Channel Setting nfiguration to set Al channel(s) as D be changed when channel is in Al a	channel(s). verage mode.
Channel	Enable/Disable	Mode
0		AI
1		AI
2	×	DI
3		DI
		 ✓ Submit

WISE-4012 WLAN Beispiel Einstellungen - Configuration

WLAN Settings						
	WLAN Mode	Infrastructure Mode	9		~	
			First AP Settings			
SSID o	f the Access Point	FRITZ				
	Security Type	Security WPA/WP	A2		~	
	Security Key	•••••				
			Secondary AP Settings (Op	tional)		
SSID o	f the Access Point					
	Security Type	Security Open			~	
Infrastructure Mode BSSID Setti	ings					
Lock BSSID	Disable					
BSSID	00-FF-FF-FF-FF					
Infrastructure Mode IP Settings						
Мас	74-FE-48-A3-13-F7					
IP	192.168.158.40			Subnet Mask	255.255.255.0	
Gateway	192.168.158.1			IP Mode	○ Static ● DHCP	

Nürnberger Straße 45 90513 Zirndorf

E-Mail: info@crautomation.de www.crautomation.com

Änderungen vorbehalten

WISE-4012 WLAN Beispiel Einstellungen - Information

C Module	
Model Name	WISE-4012
Customized Name	WISE-4012
UUD	WISE-4012_74FE48A313F7
Location	
Description	Testlabor
Working Mode	Normal Mode
	Go to Configuration O

Туре	Status			
WLAN RSSI Level	Good			
BSSID of the Access Point	1C-ED-6F-3C-01-14			

0			
	E1	25	

ONetwork Information				
WLAN Mode	Infrastructure Mode			
Мас	74-FE-48-A3-13-F7			
IP	192.168.158.40	Subnet	255.255.255.0	
Gateway	192.168.158.1	IP Mode	Static DHCP	
				Go to Configuration O

Module Name	Module Description	Firmware Description		
WISE-4012	4-ch UI and 2-ch DO IoT Wireless I/O Module	Fw:A2.06 B02, Bootloader:A1.11 B00		

C+R Automations- GmbH

Nürnberger Straße 45 90513 Zirndorf Tel. +49 (0)911 656587-0 Fax +49 (0)911 656587-99

E-Mail: info@crautomation.de www.crautomation.com

Änderungen vorbehalten

– Al

For the AI channel, the Current/Max/Min status will be shown in the status page, which includes the input range. The current status shows the latest AI value, and also the input range. The average value, which will be introduced in following pages, show the average value of selected channels.

The Max/Min status shows historical maximum or minimum value, you can reset the value by pressing "Reset".

Status		Co	Configuration	
atus				
	Current		Мах	Min
			Channel: 0	•
	Trent	كالاسلاس	Range: +/- 10 ∨	
	-4-6-4-	$\frac{2}{2}$ $\frac{2}{4}$	Value: -0.0041	V
	Ē -10		.ow Alarm Status:	a Clear
		н	igh Alarm Status:	/ Clear
Ch	Range	Value[Eg]	Value[Hex]	Value[Dec]
0	+/- 10 V	-0.0041 V	7FF2	32754
1				
1	+/- 10 V	-0.0041 V	7FF2	32754
Setting	+/- 10 V	-0.0041 V	7FF2	32754
Setting A	+/- 10 V DI DO Status	-0.0041 V	7FF2	32754 Trend
Setting A	+/- 10 V DI DO Status	-0.0041 V	7FF2	32754
Setting A	+/- 10 V DI DO Status	-0.0041 V	7FF2	32754 Trend Min
Setting A	+/- 10 V DI DO Status	-0.0041 V	TFF2	32754 Trend Min
setting A	+/- 10 V DI DO Status	-0.0041 V	TFF2 onfiguration Max Channel: 0 Range: +/- 10	32754 Trend Min
setting A	+/- 10 V DI DO Status	-0.0041 V	TFF2	32754 Trend Min
setting A	+/- 10 V DI DO Status	-0.0041 V	TFF2	32754 Trend Min V V V
setting A atus	+/- 10 V DI DO Status Current	-0.0041 V	TFF2	32754 Trend Min Min V V V V V V V V V V V V V V V V V V V

Input Range

+/- 10 V

-0.0050 V

1

For the AI channel which supports more than input range, you can configure the channel setting in "AI/Configuration/Channel Settings".

7FEF

32751

Channel Mask

You can disable the AI channel to increase the sampling rate of other enabled channels in "Channel Mask".

DI	Setting AI DI DO			
	Status	Config	juration	Trend
Сс	onfiguration			
	Common Sett	ings	C	Channel Settings
	Channel	0 •		
	Tag Name	N_0		
	Range	+/- 10 ∨ ▼		
	Channel Mask	Enabled/Disabled		
	Refresh	C Refresh		

Scaling Function

There are two types of scaling function for AI channels:

1. Input Signal Scaling - Scaling the Input Range

This is for scaling the analog input range within the configured input range, so that the Modbus value can fit the entire range. For example, Ch0 of WISE-4012 had been configured with an input range of 0~5V, but the full range of signal from sensors is 1~5V. If users do not use the Input Signal Scaling function, the 1V will be presented as 13107 in Modbus, 5V will be presented as 65535. But after Input Signal Scaling, 1V will be presented as 0 in Modbus, and 5V will still be presented as 65535.

If you would like to apply the function in the previous example, enter 1 in "Low Scaling Value", and enter 5 in "High Scaling Value".



The function only increases the resolution of Modbus data, but the accuracy still depends on the original input range before scaling. Furthermore, in the previous example, if the 0~10V input range been used for scaling to 1~5V, it may have a lower accuracy compared to using 0~5V.

For values which are going to be configured for scaling the input range, note that the "Low Scaling Value" should be lower than "High Scaling Value".

2. Physical Value Scaling - Scaling the Output Data

Further to scaling the input range of the analog input channel, the output data can also be scaled. After the function has been applied, it would be easier to read the Modbus value in the engineering unit. For example, a temperature sensor output 0~10 V which shows $0~100^{\circ}$ C. It would be better to read 0~100 in Modbus with floating data format.

In the previous case, you can configure the "Physical Min Scaling Value" and "Low Scaling Value" as 0, which shows the input voltage 0 V as physical value 0°C; and configure the "Physical Max Scaling Value" as 100 and "High Scaling Value" as 10, which shows the input voltage 10V as physical value 100°C.

Note!



The function is helping the data be more readable, but the accuracy still depends on the original input range before scaling and also depends on the sensor's accuracy.

For the values which are going to be configured for scaling the output data. For users using RESTful Web API Mapping Unit, can be configured here for further use.

Low Scaling Value	0	V
High Scaling Value	0	
Physical Min Scaling Value	0	
Physical Max Scaling Value	0	
Mapping Unit	0	

High/Low Alarm

For an AI module with digital or relay output functions featuring a built-in alarm function. When the analog input value is higher than the high alarm value, or lower than the low alarm value, an alarm condition occurs. Then the alarm status will be activated to logic high. The alarm status ia shown in the status page of AI as alarm status LED display, when the alarm condition occurs, the Alarm status LED display will be lit.

The specified digital output channel will generate a logic high value if you build the mapping relationship between alarms and DO channel in the DO mapping area. You can map the DO channel referring to AI Alarm section of DO configuration. The High/ Low Alarm status LED in AI status page can be cleared by clicking "Clear".

This page is for enabling and configuring the alarm. There are two alarm modes:

- 1. **Latch**: Once the alarm occurs, the alarm status will be activated to logic high level and will keep the value until the alarm is manually cleared. Before the value is cleared, the Alarm status LED will be continuously lit. For an AI module with digital or relay output functions, the specific output channel (chosen in the DO AI Alarm configuration page) will continuously generate logic high value. You can clear the alarm by clicking the "Clear" button in the AI status page.
- 2. **Momentary**: The alarm status will dynamically change depending on the alarm condition. If the alarm occurs, the alarm status will be logic high. If the alarm condition disappears, the alarm status will be logic low. So not only will the Alarm status LED be lit, in the web page the specific digital output channel value will change depending on the alarm condition.

After you choose the alarm mode for high alarm or low alarm, you can define the high alarm value or low alarm value by entering the value in Alarm limit text box.

Enable Low Alarm	Enabled/Disabled		
Low Alarm Mode	Momentary		
Low Alarm Value	0	V	
Enable High Alarm	Enabled/	Disabled	
High Alarm Mode	Latch		•
High Alarm Value	0	V	

Burnout Detection

The Burnout Detection function, or open-wired function, is designed for 4~20mA input range or temperature input range. For the WISE-4012, the burnout signal is activated when the current is less than 3mA. The Modbus flag indicates that the wire of the sensor connected to the channel has burned out. You can also check the Modbus address of AI Channel Status for detail.

When a burnout situation had been detected, the AI value can be shown in "Up scale" which is FFFF(HEX), or "Down scale" which is 0. You can configure this in "Burnout Detection Mode".

Sampling Rate

For models which support more than one sampling rate, you can configure the sampling rate here. For low sampling rate mode, the AI channel would have better noise rejection ability. For the high sampling rate mode, the noise will allow easier coupling to the signal.

DI S	Setting AI DI DO			
	Status		Configuration	Trend
Co	nfiguration			
	Common	Settings	с	hannel Settings
	Burnout Detection	Enabled/Disal	bled	
	Burnout Detection Mode	Up scale		T
	Sampling Rate(Hz/Ch)	10 Hz/Ch		T
	Filter Mode(Hz)	Auto(50/60Hz)		T
	Resolution	16		
	Average Channel Setting	Channel	Enable/Disable	Range
		0		+/- 10 V
		1		+/- 10 V

Average Channel Setting

To reduce the data amount, some users don't need the detailed value of each channel but the average value of the selected channel. When the channel is enabled, the values will be averaged in 16-bit integer data, and can be shown or read as another channel.

Calibration

WISE analog input modules support internal reference calibration function, before using the calibration function, you can also try to reset the module to the default factory settings for troubleshooting, or if the calibration process had not succeeded, you can reset the module to the default factory calibration parameters.

Click "Calibration" and follow the instructions to calibrate the AI channels.

verage Channel Setting	Channel	Enable/Disable	Range
	0		+/- 10 V
	1		+/- 10 V
	2		+/- 10 V
	3		+/- 10 V

Al Trend

Here you can instantly check the analog input trend of each channel. The function is useful when testing the connection and variety between WISE and sensors.



You can see the value of all digital input channels by the related LED display in this page. When DI status is a logical high, the LED will be green. If the status is a logical low, the LED will be grey.

DI Setting AI DI DO			
Status		Configuration	Trend
Status			
Channel	Mode	Status	
0	DI		
1	DI		

Invert Signal

WISE digital input channels support Invert DI Status function, there will be an **Invert Signal** check box in the configuration page. Click the check box to enable/disable the function.

Digital Filter

Digital input channels support digital filters, these can be enabled or disabled by clicking the **Digital Filter** check box. If you enable the filter, you can define the minimum acceptable signal width by the **Min. Low Signal Width** and **Min. High Signal Width** text box. (Unit: 0.1ms) The high frequency noise will be removed by this filter.

DI Setting AI DI DO					
Status	Configuration	Trend			
Configuration					
Channel	0 •				
Tag Name	DI_0				
Mode	DI All data will be cleared in the data logger if Channel Mode is changed.				
Refresh	C Refresh				
Invert Signal	Enabled/Disabled				
Digital Filter	Enabled/Disabled				
Min. Low Signal Width	1	0.1ms			
Min. High Signal Width	1	0.1ms			

Counter Mode

When you choose Counter mode, one counter will count the pulse number of the digital signal from the selected channel, and then record the count number in the register. In the DI Status page, the current count value of the selected channel is displayed by the Counter value text box. Start or stop the counter by switching the **Start/Stop** switch next to the Counter value. Reset the counter (the value in the register will be initialized to the startup value, default to be zero) by clicking the **Reset** button. Preset the **Startup Value** in the text box. When you reset the counter value, either by the reset button in the status page or by a command, the value will be reset to the Startup Value. The default value of the **Startup Value** is zero.

Like the DI mode, you can enable/disable the **Invert Signal** function and **Digital Filter** in the configuration page. The operation is the same. If you enable **Keep Last Value**, when the digital module been powered off, the last counter value will be kept in the register. When the module powers on, the counter will continuously count from that value. Without this function, when the module powers off, the counter will reset and the count value in the register will be zero.

Invert Signal	Enabled/Disabled	
Digital Filter	Enabled/Disabled	
Min. Low Signal Width	1	0.1ms
lin. High Signal Width	1	0.1ms
Startup Value	0	times
Keep Last Value	Enabled/Disabled	

DI Setting AI	DI DO		
	Status	Configuration	Trend
Status			
Channel	Mode	Status	
0	Counter	Start D Reset	
1	Counter	Start DReset	

Low to High Latch

When you choose **Low to High Latch** mode, once the digital input channel detects logic level changes from low to high, the logic status will be kept as logic high. The logic status will remain the logic high, until you clear the latch manually. The logic status will return to logic low. The logic status can be seen by the Latch status LED display in the DI Status page. Clear the latch by clicking the **Clear** button. Enable/ disable the **Invert Status** function in the configuration page.

High to Low Latch

When you choose **High to Low Latch** mode, once the digital input channel detects logic level changes from high to low, the logic status will be kept as high. The logic status will remain high, until you clear latch manually. Then the logic status will return to low. The logic status can be seen by the Latch status LED display in the DI Status page. Clear the latch by clicking the **Clear** button. Enable/disable the **Invert Status** function in the configuration page.

DI Setting AI DI	DO			
Status		Config	juration	Trend
Status				
Channel	Mode		Status	
0	High to Low Late	ch	/ Clear	
1	Low to High Late	ch	Clear	

Frequency

For pure DI channels, not including the DI function of the WISE-4012, WISE modules support frequency mode. WISE module will calculate the frequency value of the digital input signal from the selected channel. The frequency value will be displayed in the Frequency value text box in the DI Status page.
- DO

You also can control the values of all digital output channels by the status switch. The color of the switches will display current value of that digital output channel.

UI Setting AI DI DO		
Status	Configuration	Trend
Status		
Channel	Mode	Status
0	DO	
1	DO	OFF

Fail Safe Value (FSV)

When the communication between the host controller and WISE digital modules is broken, the digital output channel can generate a predefined value (this value is called the fail safe value). If the FSV checkbox is checked, the module will set the output channel to logic high when WDT times-out. If the FSV checkbox is unchecked, the module will set the output channel to logic low when WDT times-out.

DI Setting AI DI	DO			
Status			Configuration	Trend
Configuration				
Cha	inel 0	•		
Tag N	ame DC	_0		
M	ode D0	•	• All data will be cleared in the data	a logger if Channel Mode is changed.
Ref	esh 😕	Refresh		
	FSV	True/False		

To decide whether to enable the FSV function triggered by communication with the WDT, go to **General Configuration** and enable the FSV function for all the module's output channels.

General Configuration			
Scan Interval	1000	ms	8
FSV by Communication WDT	Enabled/Disabled		8
Note:Each IO will s	witch to it's FSV if the module's WDT is enabled and it	gets trig	gerd.

To decide the time period to trigger the communication WDT, go to **Network Applica**tion to enable the **Communication WDT Mode** as **Communication WDT** first, and then configure the **Host Idle (Timeout)**. (Unit: second) The default host idle time is 720 seconds.

Web Server Port (Default:80)	80		B
HostIdle (Timeout)	720	sec	B
Communication WDT Mode	Communication WDT	T	

Pulse Output

AI Alarm Drived

After you choose the **Pulse Output** mode, the selected digital output channel can generate continuous pulse train or finite pulses. You can define the pulse width by entering into the **Low Signal Width** and **High Signal Width** text box in the configuration page. (Unit: 0.1 ms) The frequency and duty cycle of the pulse output signal will be calculated automatically and displayed by the **Output frequency** and **Duty cycle** text box.

Then choose whether to generate a continuous pulse train or finite pulses by selecting the **Continuous** (for pulse train) or the **Fixed total** (for finite pulses). The text box on the right of the **Fixed total** button is used to define how many pulses you want to generate. After selecting pulse output mode, click the **Start** or **Stop** button to generate or to stop the pulse output.

	Status	Configuration	Trend
etting		50	76
	Duty cycle	50	%
Out	put frequency	5000	HZ
High	h Signal Width	1	0.1ms
	v Signal Width	1	0.1ms

Low to High Delay

Choosing **Low to High Delay** mode, is almost the same as choosing DO mode. The only difference is that there will be certain time delays when the output value changes from logic low to logic high. Define the delay time by entering its value into the **Delay Time** text box in the configuration page. Control the digital output value using the DO button and seeing its current value by the DO status LED display in the DO Status page.

High to Low Delay

Choosing **High to Low Delay** mode, is almost the same as choosing DO mode. The only difference is that there will be certain time delay when the output value changes from logic high to logic low. Define the delay time by entering its value into the **Delay Time** text box in the configuration page. Control the digital output value using the DO button and seeing its current value by the DO status LED display in the DO Status page.

FSV	True/False	
Delay Time	1	0.1ms
DI Setting AI DI DO		
Status	Configuration	Trend
Status		
Channel	Mode	Status
0	Low to High Delay	OFF
1	High to Low Delay	OFF

AI Alarm Driven

After the **High/Low Alarm** been configured in AI channel configuration, the alarm status can be mapped in to DO channel. Choose the **High Alarm** or **Low Alarm** in **Trigger Mode** to active the configured DO channel.

Mapping Channel	0	
Trigger Mode	Disabled	

4.2.7 Configuring the RS-485 Port of WISE-4051

WISE-4051 has one RS-485 port for Modbus gateway function, thus you can use this port to polling the data from RS-485 Modbus/RTU slave devices, like ADAM-4000, or ADAM-5000/485.

4.2.7.1 External Coils or Registers Status of RS-485 Port

Go the "COM1" tab to check the status or configure the Modbus Master function of RS-485 port. There can be total 32 addresses of all Modbus slave to be mapped as the I/O of WISE-4051. These 32 addresses can be coils or registers. The coils will be mapped as extension bits of WISE-4051, and the registers will be mapped as extension words of WISE-4051. So in the "Status" tab, you can see the bits or words are shown in individual pages.

Column "Channel" indicate the number of bits, there are maximum 32 bits can be shown here, but you may only mapping less than 32 coils as bits, so the empty bits are invalid. Same as words may also have empty channels.

Column "Value" shows the value polling from mapped address.

Column "Status" shows the status of each bits or words, if the channel is empty which did not be mapped to Modbus slave address, the status will shows "Unavailable".

Column "Slave ID" and "Slave Address" show where the bit or word from RS-485 Modbus slave device.

Column "Mapping Address" shows the Modbus address of bits or words when WISE-4051 be polled by Modbus/TCP. The default setting of extension bits is from Modbus address 01001 of WISE-4051, and extension words is from Modbus address 41001 of WISE-4051. There are 32 address reserved for extension bits or words for WISE-4051.

DI COM1			1			
	Status		Modbus/RTU Configuration			Diagnostician
Status						
		Bit Status			Wor	d Status
Show 16	• entries					C2* Edit
Channel	Value	Status		Slave ID	Slave Address	Mapping Address(0X)
0	0	Slave response	timeout	2	1	1001
1	0	Slave response	timeout	2	2	1002
2	0	Slave response	e timeout	2	3	1003
3	0	Slave response	e timeout	2	4	1004
4	0	Slave response	timeout	2	5	1005
5	0	Slave response	timeout	2	6	1006
6	0	Slave response	e timeout	2	7	1007
7	0	Slave response	e timeout	2	8	1008

COM1						
	Status		Modbus/RTU Configuration			Diagnostician
Status						
		Bit Status			Word	l Status
Show 16	• entries					C≇ Edit
Channel	Value	Status		Slave ID	Slave Address	Mapping Address(4X)
0	0	Slave response	timeout	1	1	1001
1	0	Slave response	timeout	1	2	1002
2	0	Slave response	timeout	1	3	1003
3	0	Slave response	timeout	1	4	1004
4	0	Slave response	timeout	1	5	1005
5	0	Slave response	timeout	1	6	1006
6	0	Slave response	timeout	1	7	1007
7	0	Slave response	timeout	1	8	1008

For the writable bit or word, you can click "Edit" button to switch to edit mode, change value and click "Apply" to write the Modbus address individually.

Bit Status				Word Status			
Show 16	* entries					숙 View	
Channel	Value	Status	Slave ID	Slave Address	Mapping Address(0X)		
0	● 0	Slave response timeout	2	1	1001	Apply	
1	● 0 ○ 1	Slave response timeout	2	2	1002	Apply	
2	• 0	Slave response timeout	2	3	1003	Apply	
3	● 0 ○ 1	Slave response timeout	2	4	1004	Apply	
4	● 0 ○ 1	Slave response timeout	2	5	1005	Apply	
5	● 0 ○ 1	Slave response timeout	2	6	1006	Apply	
6	● 0 ○ 1	Slave response timeout	2	7	1007	Apply	
7	● 0 ○ 1	Slave response timeout	2	8	1008	Apply	

		Bit Status			Word Status	
Show 16	• entries					← View
Channel	Value	Status	Slave ID	Slave Address	Mapping Address(4X)	
0	0	Slave response timeout	1	1	1001	Apply
1	0	Slave response timeout	1	2	1002	Apply
2	0	Slave response timeout	1	3	1003	Apply
3	0	Slave response timeout	1	4	1004	Apply
4	0	Slave response timeout	1	5	1005	Apply
5	0	Slave response timeout	1	6	1006	Apply
6	0	Slave response timeout	1	7	1007	Apply
7	0	Slave response timeout	1	8	1008	Apply

4.2.7.2 Modbus/RTU Configuration of RS-485 Port

In the "Common Setting" Tab, you can configure the parameters of WISE-4051 RS-485 port

- Baud Rate: 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 bps
- Data Bit: 7, 8
- Stop Bit: 1, 2
- Parity: None, Odd, Even
- Slave Respond Timeout: Here you can configure the time for waiting Modbus slave reply

- Delay between Polls: Here you can configure the delay time between each Modbus instructions
- CRC Check: Here you can enable/disable the CRC check/ignore the CRC error of Modbus

Status	Modbus/RTU Cor	nfiguration	Dia	gnostician
odbus/RTU Configuration				
Common Set	ing		Rule Setting	
Baud rate	9600 bps		•	
Data Bit	8 bit		•	
Parity	None		Ŧ	
Stop Bit	1 bit		¥	
Slave response timeout	50		ms	
Delay between Polls	10		ms	
CRC Check	 Disable Enable 			

In the "**Rule Setting**" tab, you can configure this Modbus address of end devices you would like to polling.

- Rule: There are maximum 8 rules that WISE-4051 support. Each rules can be different slave devices, in the other word, it can be maximum 8 devices connected to WISE-4051. Or you can use all rules for polling different address of same slave device.
- Slave ID: Different slave devices in same RS-485 has different slave ID, enter the slave address of Modbus devices which connected to WISE-4051 here
- **Type**: We support 4 kinds of Modbus data type, 01 Coil Status (0x), 02 InputStatus (1x), 03 Holding Registers (4x), and 04 Input Registers (3x). After you configure one of the types in the rule, then this rule will be enabled, and WISE-4051 will start to polling after the configuration been submitted successfully.
- Start Address: Enter the first address number that you are going to polling. The address base is 1, if you are going to polling the first address of Holding Registers, 40001, please enter number 1 here. Don't need to enter the whole address 40001.
- Length: Enter the length of the address that you are going to polling in this rule. For example, if you are going to polling 40001~40008, enter the length as 8 here. Please be noted that since WISE-4051 can polling maximum 32 address, the maximum length is 32 addresses, and the total amount of all rules should also less or equal to 32.
- R/W: Here you can decide if the address in this rule will be Read or Written or not. For Coil Status and Holding Registers, you can make these addresses read only, or write only to reduce the polling effort.
- Scan Interval (in milliseconds): Here decide the scan interval for WISE-4051 to polling Modbus slave devices. WISE-4051 will optimize the scan interval according you setting. However, the read scan interval may also depend on real case like: Baud rate, slave devices respond time, delay time between polls, etc. Go to the Diagnostician page to check the real respond time for referring the value of scan interval.
- Mapping Channel: When the Modbus address of slave devices been configured in each rule, these addresses will also be mapped into WISE-4051. Coils of Modbus slave devices will be mapped as bits for RESTful web service and

also be mapped as coils for Modbus address of WISE-4051. Registers of Modbus slave devices will be mapped as words for RESTful web service and also be mapped as registers for Modbus address of WISE-4051. There are 32 continuous channels of bit and another 32 continuous channels of word can be mapped. Please make sure the channels for each rules are not overlapped.

- Log: Here you can decide the data been polled from this rule will be logged in data logger or not.
- Rule Status: The web configuration interface will check if rule settings have any overlapping or confliction. The enabled rules (enable the rule by configuring "Type") should have green icon so that the "Submit" will been shown for submitting the rules.
 - *Note!* After configuring the rules, click "Submit" to apply the rules.



Note!

After changing the rule configurations, the logged data in data logger will be cleared for organizing new data structure of data logger for new configurations.

Note! Place your mouse over the table title to show the tips.



Rule	Slave ID	Туре	Start Address	Length	R/W		Scan Interval	Mapping Channel	Log	Rule Statu	
0	1	03 Holding register •	1	8	R	•	1000	0	۲	•	
1	2	01 Coil status 🔹	1	8	R	•	1000	0	۲	•	
2	2	01 Coil status 🔹	17	8	R	•	1000	8	۲	•	
3	0	Disable •	1	1	R	•	1000	0		0	
4	0	Disable •	1	1	R	•	1000	0		0	
5	0	Disable •	1	1	R	٠	1000	0		0	
6	0	Disable •	1	1	R	٠	1000	0		0	
7	0	Disable •	1	1	R	•	1000	0		0	

In previous figure we demonstrate how to configure an ADAM-4017+ (or ADAM-4117) which slave ID is 1 and an ADAM-4055 which slave ID is 2 as the Modbus slave devices connected to WISE-4051.

ADAM-4017+ (or ADAM-4117) is an 8-ch analog input Modbus I/O modules, the Modbus address of AI0~AI7 are 40001~40008. In the **Rule Setting** page, we configure the **Slave ID** = 1; **Type** = 03 Holding Registers, since the Modbus address 40001 is start from 4; **Start Address** = 1 and **Length** = 8 for the address 40001~40008; **R**/ **W** = R, since this address is for analog input which is read only; **Scan Interval** = 1000ms for polling every second; **Mapping Channel** = 0, to mapping the data from AI0~7 of ADAM-4017+ to channel 0~7 of Word Status; and check the **Log** to log the data from ADAM-4017+.

ADAM-4055 is an 8-ch digital input and 8-ch digital output Modbus I/O modules, the Modbus address of DI0~DI7 are 00001~00008; the Modbus address of DO0~DO7 are 00017~00024. Since the address is not continuously, so we are going to configure digital input as one rule, and digital output as another rule.

For digital input channels: In the **Rule Setting** page, we configure the **Slave ID** = 2; **Type** = 01 Coil Status, since the Modbus address 00001 is start from 0; **Start Address** = 1 and **Length** = 8 for the address 00001~00008; **R/W** = R, since this address is for digital input which is read only; **Scan Interval** = 1000ms for polling every second; **Mapping Channel** = 0, to mapping the data from DI0~7 of ADAM-4055 to channel 0~7 of Bit Status; and check the **Log** to log the data from ADAM-4055. Please be noted that the Bit Status and Word Status have individual channel number, so the Word Status for ADAM-4017+ and the Bit Status for ADAM-4055 are all start from 0.

For digital output channels: In the **Rule Setting** page, we configure the **Slave ID** = 2; **Type** = 01 Coil Status, since the Modbus address 00017 is start from 0; **Start Address** = 17 and **Length** = 8 for the address 00017~00024; **R/W** = R/W, since this address is for digital output which can be wrote and read, you can also configured as W if you don't want to read back the value; **Scan Interval** = 1000ms for polling every second; **Mapping Channel** = 8, to mapping the data from DO0~7 of ADAM-4055 to channel 8~15 of Bit Status; and check the **Log** to log the data from ADAM-4055. Please be noted that the channel 0~7 of Bit Status have been occupied by previous rule, so you should assign the channel number from channel 8~31.



Figure 4.1 Application Scenario of WISE-4051 RS-485 Port with ADAM-4000 Modbus I/O Module

WISE-4051		A	ADAM-4055			WISE-4051			ADAM-4017+		
Bit Status	Mapped Modbus Address	1/0	Slave Modbus Address		Word Status	Mapped Modbus Address		I/O	Slave Modbus Address		
Ch0	01001	DI0	00001		Ch0	41001		AI0	40001		
Ch1	01002	DI1	00002		Ch1	41002		Al1	40002		
Ch2	01003	DI2	00003		Ch2	41003		Al2	40003		
Ch3	01004	DI3	00004		Ch3	41004		AI3	40004		
Ch4	01005	DI4	00005		Ch4	41005		Al4	40005		
Ch5	01006	DI5	00006		Ch5	41006		AI5	40006		
Ch6	01007	DI6	00007		Ch6	41007		Al6	40007		
Ch7	01008	DI7	00008		Ch7	41008		AI7	40008		
Ch8	01009	DO0	00017		Ch8	41009					
Ch9	01010	DO1	00018		Ch9	41010					
Ch10	01011	DO2	00019		Ch10	41011					
Ch11	01012	DO3	00020		Ch11	41012					
Ch12	01013	DO4	00021		Ch12	41013					
Ch13	01014	DO5	00022		Ch13	41014					
Ch14	01015	DO6	00023		Ch14	41015					
Ch15	01016	DO7	00024		Ch15	41016					
Ch16	01017				Ch16	41017					
Ch17	01018				Ch17	41018					
Ch18	01019				Ch18	41019					
Ch19	01020				Ch19	41020					
Ch20	01021				Ch20	41021					
Ch21	01022				Ch21	41022					
Ch22	01023				Ch22	41023					
Ch23	01024				Ch23	41024					
Ch24	01025				Ch24	41025					
Ch25	01026				Ch25	41026					
Ch26	01027				Ch26	41027					
Ch27	01028				Ch27	41028					
Ch28	01029				Ch28	41029					
Ch29	01030				Ch29	41030					
Ch30	01031				Ch30	41031					
Ch31	01032				Ch31	41032					

Table 4.1: Application Scenario of WISE-4051 RS-485 Port with ADAM-4000 Modbus I/O Module

4.2.7.3 Modbus Slave Devices Diagnostician

Since different devices will have different responds time, to have better configuration of scan interval, here WISE-4051 provides Diagnostician function for testing the respond time of each rule. You can refer to the respond timeout in this page for configuring the "**Scan Interval**" in "**Rule Setting**" page. You can reset the testing result in this page by clicking "**Reset Response Time**".

	Status	Modbus/RTU Configur	ation	Diagnostician
odbu	s/RTU Slave Response Time			
tule	Current Response Time(ms)	Max Response Time(ms)	Min Response Time(ms)	Status
	50	50	50	Slave response timeout
	50	50	50	Slave response timeout
	50	50	50	Slave response timeout
	0	0	65535	Unavailable
	0	0	65535	Unavailable
	0	0	65535	Unavailable
	0	0	65535	Unavailable
	0	0	65535	Unavailable
		D-11 40 it		

- Scan Interval of IO status

Scan Interval decides the I/O polling interval in the next part of the "I/O Status". This value will not be saved into the module, so it is only valid until the power is switched off.

General Configuration				
Scan Interval	100	0	ms	8
FSV by Communication WDT		Enabled/Disabled		8
O Note:Each IO will s	witch to	o it's FSV if the module's WDT is enabled and i	gets trig	gerd.

- System Control and Maintenance
 - Locate module Helps user search for lit modules. (The status LED will be on for 30 seconds when enabled.)
 - Restore to factory default -The system configuration will be cleared and restored to factory default settings when enabled.
 - Reset password- Reset the password here
 - Restart system This module's system will reboot when enabled.

Control		
Locate	✗ Disabled	D
Restore to Default	✔ Restore	
Reset Password	🖌 Reset	I
System Restart	✗ Restart	୯

- Diagnostician

WISE modules provide a Diagnostician page for indicating the operating status of the WISE module. The status of each function is shown for easy troubleshooting.

양 Diagnostician

Name	Description	Value
🖺 Data Logger	Event Status	Normal

- System Configuration
 - Network Application

You configure the **Web Server Port, Host Idle (timeout)**, and decide whether to enable **Communication WDT** here. The **Web Server Port** decides which Ethernet port can be used for the web service, which includes the web configuration and RESTful Web API. The default port is 80, and if you change the port number as 8080, you need to access the module through http://192.168.1.1:8080/config in AP mode for example.

The **Host Idle (timeout)** decides the availability of the TCP connection between the host controller and WISE. MCU-based WISE modules support four TCP connections at the same time for visiting users. It means WISE can be visited by four TCP hosts at the same time, and is not able to connect a fifth host. In this case, if one of the hosts stops communicating with the WISE module for longer than the configured host idle time, default 720 seconds, for example, the WISE module will close the TCP connection with the host.

The Communication WDT has a **Host Idle** time, and will be triggered when all TCP connections are closed. This includes all hosts which visit WISE and also the communication between remote servers like Dropbox or private servers. Once the WDT is enabled, it will trigger systems events like FSV of output channel or system log.

Web Server Port (Default:80)	80		B
HostIdle (Timeout)	720	sec	B
Communication WDT Mode	Communication WDT	T	B

Time & Date / SNTP

You can see the current time here, decide which time zone you use, and calibrate the time by clicking **Click Me** and reading the time from host devices.

Local Time		
Current Time	2015-10-29T11:42:45+08:00	8
Time Zone	(GMT+08:00) Taipei	T
Time Calibration	Click Me	B

You can enable SNTP, so the module can act as an SNTP client to perform time synchronization from an assigned SNTP server.

SNTP				
Enable SNTP Client	Enabled/Disabled	SNTP Time Polling Interval	43200	sec
Primary SNTP Server		Secondary SNTP Server		
				✓ Subm

Modbus Address

In order to provide users with more flexibility and scalability in deploying modules. It removes the limitation of the Modbus address setting and make it configurable as user's need. There are two Modbus address sections (0X and 4X) for you to configure each function item.

Coils Status(0X)		Holding Registers(4X)
tting Address		
Item	Base	Length
DI Status	1	4
DO Otatura		

General Configuration

The **Scan Interval** decides the I/O polling interval in the next part of the "I/O Status". This value will not be saved into the module, so it is only valid until the power is switched off. The **FSV by Communication WDT** decides whether to enable the FSV function triggered by communication with WDT. Enable the FSV function for the entire module's output channels here.

General Configuration					
Scan Interval	100	0		ms	8
FSV by Communication WDT		Enabled/Disabled			8
Note:Each IO will s	witch to	o it's FSV if the module's WDT	is enabled and it g	ets trig	gerd.

Account Management

Change the passwords of each account here.

Account		
Туре	Password	Authority
Root	Change Password	Read/Write
Admin	Change Password	Read/Write
User	Change Password	Read

System Configuration File

Update or Download the configuration file from WISE modules. The following items will be saved in the configuration file:

Configuration	Information, Wireless, Network App, Time & Data, SNTP, Modbus, General Cloud, Account
I/O Status	I/O Configuration, RS-485 (WISE-4051 only)
Advanced	Access Control, Data Logger (Data log and Cloud upload)

Download configuration file from module

Go to the **Firmware** page in system configuration and click the **Download configuration File** button, the configurations can be saved as a file.

- Update configuration file to module

Go to the **Firmware** page in system configuration and click the icon to select which configuration file is going to be uploaded from the computer. Before uploading the configuration file to the module, select whether or not to apply the IP settings to the WISE module.

Files			
Firmware		5	
Configuration File	With IP Settings(Default) -		
	Download Configuration File		

- Firmware Version
 - Check Version

The firmware version is shown in the "System Information" page. At the end of the configuration web page, check the version of configuration web page. For normal release module, the version of configuration web page will increase with the firmware version, as these have to been updated at the same time.

Module Information					
Module Name	Module Description	Firmware Description			
WISE-4012	2-channels digital output, 4-channels universal input	Fw:A0.91 B00, Bootloader:A0.90 B00			
	Version : A1.00 B05, Copyright © 2015 By Advantech Corp.				

- Update Firmware

Go to the **Firmware** page in system configuration and click the icon to select which firmware file you are going to update. You can find the latest official release firmware file at the Advantech support site (http://support.advantech.com/support/).

Files			Uplo	oad Firmwar
Firmware	WISE-4012_vA0.91B01_UT.bin	5	×	*
Configuration File	With IP Settings(Default) -			5
	Download Configuration File			

Access Control for Security

To avoid unauthorized access, manage which host PC or device can remotely control the WISE-4000 module by IP or MAC Address. Enable one of the rows and enter the IP address or MAC address which allows access to WISE-4000 devices.



For WISE-4000 wireless modules, users can only configure access control by the IP address, not the MAC address.

Access Control

Enable/Disable	IP(Ex: 255.255.255.255)
0	255.255.255
□ 1	255.255.255.255
2	255.255.255.255
3	255.255.255.255

Data Logger

The WISE-4000 series supports data log functions, the I/O status can be logged in the module and also be queried from the module.

- Time & Date / SNTP

Before you start the log function, confirm the RTC time inside the WISE module is configured to the correct time. Standard WISE modules, not including the WISE-4012E, come with an RTC battery. Once the RTC time has been configured, you don't need to synchronize the time with SNTP server. The time will be kept in the RTC with the battery. For the WISE-4012E, which doesn't have an RTC battery, you need to synchronize the time with the SNTP server.

- Data Configuration
 - I/O Data

You can configure the **Log Conditions** to be logged by time period or by communication with WDT. If you check the **By Period** box, it enables periodic logging, and the log period can be decided in following box. Note that the period is increased by 0.1 seconds, meaning that if the user configures "600" here, the status of the I/O will be logged each minute. If you check the box **By Communication WDT**, it will been enabled, once the condition of the WDT has been met, the status of the I/O will be logged.

For the analog input channel, data can be logged by the AI Deviation Rate (Dividing difference between present sample value and previous sample value by the total range value). Here you can enter the percentage of deviation rate to be the criteria for triggering logger.

All the data can be kept even if the module is powered off, however, you can clear all data in the logger when powering up WISE module. Just check the **Clear Log when Power Up** box. When the data is logged to maximum memory capacity, logger will stop logging by default. You can check the box of the **Circular Log when Memory Full** to overwrite the earliest data.

I/	O Configuration	System Configuration
Log Conditions		
	By Period 10	0.1 sec
	By Communication WDT Log	
IO Trigger Log Condit	tions	
	By AI Deviation Rate 5	%
General		
	Clear Log when Power Up	
	Circular Log when Memory Ful	a

The **Channel Fields** tab is to decide which I/O channel's status will be logged, and if the change of the status also need to be logged or not. Note that the log memory will be cleared once any parameter is changed in the **Channel Fields**, and also in **IO Fields**.

For a digital channel, check the **Log Enabled** box to log the status of checked channel periodically. Or check the **Change of State** to trigger data logged by status change. For the universal input channel, the DI channel should be configured in **AI/UI** page.

	Channel Fields	IO F	IO Fields		
DI	DO/Relay	AI/UI	AO		
Channel	Log Enabled	Change of State			
0					
1					

For AI channels, check the **AI Log Enabled box** to log the status of checked channel periodically. Or check **AI Deviation Enabled** to trigger data logged when the AI value changed over the deviation rate which been configured in the page above.

	Channel Field	s	IC	D Fields
	DI	DO/Relay	AI/UI	AO
Channel	AI Log Enabled	DI Log Enabled	Al Deviation Enabled	DI Change of State 🗐
0				
1		Ø		
2		Ø		
3		Ø		
Avg				

The **IO Fields** tab is to decide which AI data will be logged. Note that the log memory will be cleared once any parameter changed in the **Channel Fields** and **IO Fields** tabs.

Channe	l Fields	IO	Fields			
AI Log Data Value Options						
Raw	Enabled/Disabled	Engineering	Enabled/Disabled			
Max Raw	Enabled/Disabled	Max Engineering	Enabled/Disabled			
Min Raw	Enabled/Disabled	Min Engineering	Enabled/Disabled			
After Scaling	Enabled/Disabled	Status	Enabled/Disabled			
Physical Value	Enabled/Disabled					

System Data

The WISE data logger function not only logs the I/O status, but also logs system events for module diagnostics or troubleshooting. You can decide what kind of system events you would like to log here.

I/O Configuration	System Configuration
Log System Events	
	nnection
✓ Wireless Disc	connection
Communicat	tion WDT
Cloud Upload	d fail
Cloud Push f	fail
SNTP fail	
Power on/off	f
Memory full/	overwrite
Access Control	irol fail
PW error	
FW upgrade	:
Battery low	
Internal confi	iguration Error
Internal flash	h access error

Logger Configuration

In the previous page, you configured which data is logged. In this page you can enable the local memory storage function. There are separate switches for enabling logging I/O data or system data. You can turn ON the switches to enable logging.

Data Configuration	Logger Configuration	Local Data Query
Memory Storage		
I/O Log		
System Log	OFF	

Local Data Query

The logged data can be queried from the WISE module. Due to the limitation of MCUbased WISE modules, the file will be saved in a *.json file. You can visit https://jsoncsv.com/ to convert the data from *.json to *.csv.

Before querying the logged data, you can configure the format of the file. You can decide whether the data comes with a UUID or MAC ID, and decide the type of time stamp. For the latest version WISE module version, which supports **Local Date and Time (GMT)** the time stamp will look like: "2015-08-27T15:20:29+08:00", or if it supports **Coordinated Universal Time (UTC)** that the time stamp will looks like: "1440660089".

After deciding the data format you can query the data by the **Amount of Latest Data** for a quantity of data, or by **Time Filter** for a period of data. However, if the amount of data is not too large, you can also choose **No Filter Enabled** to query all the data.

Now you can click **Query** to query the data from local memory. Then the data will be shown in a chart and table. Click **Save** to download the data from the WISE module in a *.json file. Or you can click **Clear** to clear all the data in local memory.

Data Configuration Logger Cor	nfiguration	Local Data Query						
I/O Data Query				System D	ata Query			
IO Data Query Format 🝷								
UUD	🗷 Enable	ed/Disabled		MAC ID	Enabled/Disabled			
Timestamp	Coordinated Universal Time(UTC)							
Query Filter 🤜								
Filter Mode	Amour	t of Latest Data			۲			
Current Total Amout	 ✓ ✓ 	2						
Total Amout		D						
		Q Query	2 Clear					

				i i roporaon		
Ю Туре	DO Logic State	us 🔻	Log Type	All 🔻		
	IO-Type B	ar Chart		DO Logio	: Status	
•1	DO Logic Status 🛛 🔴 Al V	Value 🛛 Al Status Flags			• F	Periodic
	40	.00				
IO-Type_4						
IO-Type_7		80.00				
IO-Type_7		80.00				
IO-Type_7		80.00				
IO-Type_7		80.00				
IO-Type_7	• entries	80.00		Se	earch:	
IO-Type_7	• entries Timestamp	80.00 UUID		Siot Channel	earch:	Value
IO-Type_7	entries Timestamp 1446090622	80.00 UUID WISE-4012_00D0C9CC00	299 0	Slot Channel D 0	earch: I/O-type 4	Value 0
I0-Type_7 a ▼ iow 10 √ og Type 28 28	 entries Timestamp 1446090622 1446090622 	80.00 UUID WISE-4012_00D0C9CC000 WISE-4012_00D0C9CC000	999 0	Slot Channel 0 0 1	earch: I/O-type 4 4	Value 0 0

Cloud Logger (WISE-4000 wireless series only)

– Dropbox

Refer to section 4.2.8 Configuring Cloud Server for Dropbox cloud logger.

Private Server

If you don't want to push the data to public file-based cloud like Dropbox, WISE also supports the **Private Server** function which pushes data to a private web server setup by yourself. You can setup your own web service to receive the data from WISE module, or use the example agent on your own server to receive the files pushed from the WISE module.

Go to the **Cloud Configuration** page and select the service as **Private Server**. Then configure the **Private Server Setting**. If you would like to use the example agent provided by WISE, you need to confirm the **Server IP** and **Server Port**, and make sure the server port you've configured had not been occupied by another application on your private server. To setup your own application to receive the file from WISE, you may need to configure the URL. SSL security also supports Dropbox to provide you with a safe private cloud solution. Once SSL security had been enabled, you need to setup the SSL service on your private server.

loud Configu	iration		
Select	Service Private Server •		
rivate Server Set	ting		
Server IP	172.18.3.16	Server Port	8000
Data File Upload URL	/upload_log		
Data Push URL	/io_log	System Event Push URL	/sys_log

If you are not able to setup the SSL service, there is another option for safety. You can have **Authentication** for the private server with a **User Name** and **Password** which is also provided by our example agent.

Authentication	uthentication					
Туре	Basic Authorization		•			
User Name	root	Password	0000000			

After **Cloud Configuration** had been configured as a private server, you can go back to the **Logger Configuration** page in **Data Logger**. Before switching Cloud Upload to ON, you can configure the data upload criteria, and for I/O signal or system diagnosis individually. The criteria can be **Item Periodic Interval mode** for pushing data by a quantity of data, or **Time Periodic Interval mode** for pushing data by a period of time (Unit: 0.1 sec). If you don't want to upload the I/O or system data, choose **Disable**. After the upload criteria have been configured, you can switch **Cloud Upload** ON and start uploading.Then the data will be pushed to the cloud in *.csv file.

Cloud Upload		
Cloud Upload ON		
Signal Measurement Upload		
Data Upload	Item Periodic Interval mode	×
	20	Item
File Tag		
System Diagnosis Upload		
Data Upload	Disable	T
File Tag		

- Push Notification

For Cloud Logger functions Private Server, the data all comes from the local memory of WISE, so you can see it from the WISE data logger and make a batch of data as a file, then push it to the web server. Then push the latest data when the log condition has been triggered, like the changes of DI status. The WISE module will push a notification in JSON format to the private server as configured above, and then you have the latest WISE module data. You can switch the **I/O Log** or **System Log** ON, then the WISE module will start pushing the latest logged data to the private server.

Push Notification	
I/O Log	OFF
System Log	OFF

4.2.8 Configuring Cloud Server (WISE-4000 wireless series only)

- 1. Make sure the WISE-4000 module is able to access the Internet, and the device that's going to configure the WISE-4000 module is within the same IP domain as the WISE-4000 module
- 2. Go to the Cloud tab of Configuration.



The following instructions use Dropbox. Make sure Dropbox provide their service in your region or find an alternative public cloud service.

3. Select Dropbox as the cloud server.

Cloud Server	
😺 Dropbox	•
Link Status	
	C

4. The browser will open a new window for Dropbox. Enter your Dropbox account information including E-mail and Password, then click "Sign in".

•	•	•	
😵 Dropbox - Al	PI Request Authorization - Sign in - Google Chro	me 😐	
🔒 Dropbox, I	nc [US] https://www.dropbox.com/1/	/oauth2/au	thorize?cli
			*
- 🐳			
Cign i	n to Dronboy to link with WICE C	loud Logg	o.r.
Sign i	n to Dropbox to link with WISE CI	ioua Logge	er
F	mail		
Γ.			
ŀ	assword		
	_		
Fo	orgot your password?	Sign in	
	_		

5. After logging in, click "Allow" to allow WISE Cloud Logger Apps to access your Dropbox account to store the data log file.



6. Dropbox will then provide a code, copy this code and return to the configuration web page of the WISE module.

Cloud
Enter this code into WISE Cloud Logger to finish the process.
gSz6MOpQd7kAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA

7. Click "Next" to enter the code.

Grant Cloud Access

Х

Step 1 Login to your Cloud Website and grant access of "WISE Cloud".



8. Paste the code provided by WISE Cloud Logger, then click "Submit".



9. If your WISE-4000 module is correctly connected to the Internet, you will be able to set the functions successfully. Click "Close" to return to Configuration.

	Grant Cloud Access	Х
	Setting Successfully	
10. You will tl	★ Close ●●○ hen be able to see the "Link Status" shows "Ready".	
	Configuration	
	Information Wireless Network App Time & Date SNTP	
	Modbus Control General Cloud Firmware Account	

😵 Dropbox 🔹

C

Configure

Ready

Cloud Configuration

Cloud Service

Link Status

Configure WISE-4000 with ADAM.NET Utility 4.3

ADAM.NET Utility, which is designed with graphical operation interface, is aimed to offer users directly configure, control WISE-4000 module, and monitor the real-time status of remote WISE-4000 module via Ethernet or Wireless connection.

To keep you informed with latest update, you also can check it from the following download link on Advantech website.

http://support.advantech.com.tw/Support/DownloadSRDetail.aspx?SR_ID=1-2AKUDB

Note!

- Before installing ADAM.NET Utility, you need to install .NET Framework 2.0 or higher version.

- System requirement
 - Microsoft Windows XP/7
 - At least 32 MB RAM
 - 20 MB of hard disk space available
 - VGA color or higher resolution monitor
 - Mouse or other pointing devices
 - 10/100 Mbps or higher Ethernet Card
- Install ADAM.NET Utility in your computer. 1. (After successfully installation, there will be a shortcut generated on the screen)



- 2. Double click the shortcut icon, and then you will see the main operation window.
- 3. Click Search Module icon in Toolbar. You will see all online modules in the left Module Tree screen and an unconfigured new module, whose default password is 00000000, will appear on the Others section as below. Now you can define the network mode of the module in the beginning. After that, you will be able to perform other settings.





4.3.1 **Operation Framework**

> The operation window mainly contains 4 areas, including Menu, Toolbar, Module Tree screen and Main Operation screen.

4.3.1.1 Menu

a. File

Open Favorite Group

You can import the favorite configuration group file (.XML) from your computer.

Save Favorite Group

You can save the favorite group configuration group as XML file to your computer.

Auto-Initial Group

If you want to have the same favorite group configuration when you exit ADAM.NET utility and launch it again, you need to check this option.

Exit Exit ADAM.NET Utility.

b. Tools

Search Device

Search all the WISE-4000 modules you connected in local Ethernet.

Add Devices to Group

It's used to add WISE-4000 modules to your favorite group. After activating search function, all online modules will show on Module Tree Screen area. Now you can enable this function to select the device you want to add in the Module Tree Screen.

Group Configuration

Group Configuration is on WISE-4000 series module. It can help you efficiently configure or maintain massive WISE-4000 modules with the same configuration file or firmware upgrade at one time in the local network. The following steps will instruct you how to operate it.

Terminal for Command Testing

WISE-4000 series module Modbus/TCP as communication protocol, so you can launch the terminal to directly communicate with WISE-4000 series module by these two protocols.

Print Screen

You can save current ADAM.NET Utility screen into an image file by this option.

HTML File Packager

You can pack your user web page by this tool:

1.Put all the files that going to pack in same folder, and "Browse..." the folder

- 2. Press "Save as..." and give a file name after package
- 3. Check all the files had been selected in "File List"
- 4. Check "Gzip Compression" to reduce the file size
- 5.After press the "Apply" button, your user web page will be compressed as "*.ehf" file, then you can download the file into your WISE module

Source	e ———						
Folder	: [Browse				
Destin	ation —						
Туре :	[]	Encapsula	ated User's HI	TML File Format	•		
File Pa	th :]]	D:\wise40	60lan_UserW	VebPage.ehf			Save as
File L	ist :					. m	
_		1		A Contractor of Destance	Concernant Destant		1 17/1 - M
		No.	Status	Original Bytes	Compressed Bytes	Туре /	File Name
		No. 1	Status	Original Bytes	Compressea Bytes	.css	style.css
•	V	No. 1 2	Status	Original Bytes	Compressed Bytes	Iype / .css .html	style.css index.html
•		No. 1 2 3	Status	Ungmai Bytes		lype / .css .html .js	style.css index.html jquery.js
•		No. 1 2 3	Status		Compressed Bytes	lype / .css .html .js	rtie Name style.css index.html jquery.js
► •	 	No. 1 2 3	Status		Compressea Eyres	lype / .css .html .js	rue wame style.css index.html jqwery.js
► ▲	v v	No. 1 2 3	Status			lype / .css .html .js	rue wame style.css index.html jquery.js

c. Setup

Favorite Group

You can configure your favorite group including add one new device, modify or delete one current device, sort current devices and diagnose connection to one device.

- Refresh Serial and Ethernet ADAM.NET utility will refresh the serial and LAN network connection situation.
 Add COM Ports
 - Add COM Ports This option is used to add serial COM ports in ADAM.NET Utility. You won't need to use this option for WISE-4000 modules.
- Show TreeView Check this option to display the Module Tree Screen area.
- Allow Calibration Check this option to allow calibration function enabled on AI/O module.

d. Help

Check Up-to-Date on the Web

It will automatically connect to support and download page of Advantech website when it enabled. You can find and download the latest version of WISE-4000 utility there.

About ADAM.NET Utility The current version of ADAM.NET Utility is installed on your computer.

4.3.1.2 Toolbar

There are 8 graphical icons for common used options of Menu on the toolbar.

🕒 🔜 🔍 📲 🖋 🐌 🕨 🗇

Definition (from left to right)

- 1. Open favorite group
- 2. Save favorite group
- 3. Search Modules
- 4. Add Devices to Group
- 5. Terminal for Command Testing
- 6. Group Configuration
- 7. Monitor Data Stream/Event
- 8. Print Screen

4.3.1.3 Module Tree Screen

The Module Tree Screen locates on the left part of ADAM.NET utility operation window. There are four categories in this area:

Serial

All serial I/O Modules (ADAM-4000 and ADAM-5000 RS-485 serial modules) connected to the host PC will be listed in this category.

Ethernet

All Ethernet I/O Modules (WISE-4000, ADAM-6000, ADAM-6100, and ADAM-5000 TCP modules) connected to the host PC will be listed in this category.

Favorite Group

You can define which devices listed in the three categories above into your personal favorite group. This will make you easier to find your interested modules. Right click on the WISE-4000 device item under the Favorite Group item and you can select Add New Group to create a new group. After you create your own group, right click on your group and Add New Device into your group. You can also select Diagnose connection to check the communication.

ADAM-4500_5510 Series

This is a DOS interface utility for remote controllers such as ADAM-4500 and ADAM-5510 series.

Wireless Sensor Networks

All wireless I/O Modules (ADAM-2000 modules) connected to the host PC, through wireless gateway, will be listed in this category.

4.3.1.4 Main Operation Screen

Main Operation Screen located on the right side of utility includes I/O status display and function setting. You can select different items in Module Tree Screen, and then Main Operation Screen will change dependently. You can do all configurations and test in this area.

In Information page (after clicking Ethernet), you can configure Connection/Send/ Receive/Scan Timeout. The supervisor password is a shortcut to let you enter a password at one time which's applied for certain modules, so you don't need to enter the same password for each module when you check it.

4.3.2 Configure WISE-4000

- Configure the computer's IP address as the same domain as WISE-4000 module. For the new WISE-4000/LAN Series which default IP address is 10.0.0.1, the IP address of computer can be configured as 10.0.0.99 for example as following.
- 2. Open the Adam/Apax .NET Utility then you can see the IP address of computer been shown under "Ethernet" tree. You can right click to refresh the subnodes of this tree. Or click "Search Device" to find WISE-4000 module.

File Tools Setup Help			
🕒 🔙 🔍 📲 🖋 🗞 🕨 📾			
Serial Ethemet 000 Othe Favorite ADAM4500_5510Series Wireless Sensor Networks	Information Host name: Adapter: Connection timeout: Send timeout: Receive timeout: Scan interval:	10.0.0.99 2000 ms 2000 ms 1000 ms 1000 ms	
	Supervisor password:		=

3. Users can also right click the IP address to find WISE-4000 module.

File Tools Setup Help		
🕒 🔜 🔍 📲 🖋 🐌 🕨 🗖		
Ethernet	Information ost name:	
ADAM4500_5510Series	Adapter:	10.0.0.99
	Connection timeout:	2000 ms

4. After the module been found, it will be listed under IP address in same domain, you can login the embedded web configuration web page for further configuration as introduced in previous section



5. There are some function provide in same pages in utility, first you can enter the account and password faster in "Login Info" tab.

Serial	🛃 Login Info 👻 💭 Device Info 👻 👷 QR
Euclider E-22 10.0.0.99 10.0.0.1-[WISE-4010/LAN]	✓ ^{root} admin SE-4010/LAN Web
- 🮯 Others 💁 Favorite Group	user
ADAM4500_5510Series	Password
· · · · · · · · · · · · · · · · · · ·	
	Login

6. In the "Device Info" tab, the detail information of this module will been shown



 The "QR" tab will generate the QR code of the web configuration web page for mobile device to access the module. User can also click the QR code to open the browser for further configuration.





If you are not able to search the module, you can configure the SW1 behind the module to initial mode. After power up and search the module in utility, user can find the module with default IP address, and the device name will been shown in "Others" tree with (*) sign. So user can change the device network setting in this page. Or try to locate the device and also reset the password with same page. After the new network setting been apply, please configure the SW1 back to normal mode and power up again to reboot in new network setting.

Serial Ethernet 10.0.0.99 Others Pavorite Group ADAM4500_5510Series Wireless Sensor Networks	Setting Network setting: — MAC address : IP address : Subnet Address : Default gateway :	00-D0-C9-66-00-A4 10.0.0.1 255.255.0.0 0.0.0.0	Ethernet Mode Configured © Static © DHCP Port Number Setting (0~65535) 80 ÷
	Others: Locate Enable	Reset Password	

4.4 Site Survey Tool for WISE-4000 Wireless Series

WISE-4000 Wireless Series provides Site Survey Tool for testing the communication quality between WISE-4000 wireless module with wireless access point or wireless router.

4.4.1 Site Survey Architecture

Wiring the wireless AP with the PC installed with Site Survey Tool (Utility), if possible, the network should only have PC, AP, and WISE-4000 only.



4.4.2 Site Survey Mode

WISE module will go to site survey mode operation for testing communication quality. Most of the functions of WISE module will temporally stop to doing site survey operation. And the LED status will work as following:

LED	Color	Indication	Behavior
Status	Green	OFF	Site Survey mode
Com	Yellow	Blink	Site Survey data packet TX/RX
AP/Infra	Green	OFF	Site Survey mode (Station Mode)
Signal Strength	Green	Blink	Site Survey mode

4.4.3 Site Survey Tool

Search WISE-4000 module as described in the last section, after click the module shown in Ethernet tree. There is a "Site Survey" icon as following. Click the "Site Survey" icon to open site survey tool windows as following. Click "Start" to set the module in site survey mode and start the site survey tool. User can click "Restart" to restart the testing result, or click "Stop" to stop the testing and set the module back to normal operation.

	Account: root Password:		
		ogin	
•j• W	ise Wireless Network Site Sur	vey	×
Netw Clien	ork Name (SSID) WISE_4 t IP Address 192.168	лР .0.3	
	al Quality Test Re Signal S Good P	sults /trength ackets	-19 dBm 100 %
	Item	Content	
	Average Response Time (secon	1) 0.017	
•			
Þ	Execution Period (second)	1	
•	Execution Period (second) Total Packets	1 133	
>	Execution Period (second) Total Packets Pass Packets	1 133 132	
▶ 	Execution Period (second) Total Packets Pass Packets Wrong Packets	1 133 132 0	
▶ 	Execution Period (second) Total Packets Pass Packets Wrong Packets Lost Packets	1 133 132 0 0	
	Execution Period (second) Total Packets Pass Packets Wrong Packets Lost Packets ESSID	1 133 132 0 0 E8-CC-18-B6-	35-0А
	Execution Period (second) Total Packets Pass Packets Wrong Packets Lost Packets ESSID Avg Signal Strength (dBm)	1 133 132 0 0 E8-CC-18-B6- -30	35-0А

Connection

Network Name (SSID): Show which wireless AP is connected.

Client IP Address: Show the IP address of the wireless adapter of PC

Signal Quality

Show the signal strength by bar chart

Testing Results

Signal Strength: The average result of the signal strength during testing Good Package: The percentage of passed packets during testing

Current Activity

Detail information of each testing packets

Port

User can configure which UDP port of PC is assigned for site survey testing

WISE-4000 User Manual



I/O Modbus Mapping Table
A.1 Modbus Function Code Introduction

To full-fill the programming requirement, there is a series of function code standard for user's reference.

Code (Hex)	Name	Usage
01	Read Coil Status	Read Discrete Output Bit
02	Read Input Status	Read Discrete Input Bit
03	Read Holding Registers	Read 16-bit register. Used to read integer or
04	Read Input Registers	floating point process data.
05	Force Single Coil	Write data to force coil ON/OFF
06	Preset Single Register	Write data in 16-bit integer format
08	Loopback Diagnosis	Diagnostic testing of the communication port
0F	Force Multiple Coils	Write multiple data to force coil ON/OFF
10	Preset Multiple Registers	Write multiple data in 16-bit integer format

A.2 WISE-4010/LAN Modbus Mapping Table

Address (0X)	Channel	Description	Attribute
00017	0		Read/Write
00018	1		Read/Write
00019	2	- DO value	Read/Write
00020	3	-	Read/Write
00101	0		Write
00102	1	-	Write
00103	2	- Reset Historical Maximum Al Value	Write
00104	3		Write
00105	Average Ch 0~3		Write
00111	0		Write
00112	1		Write
00113	2	Reset Historical Min. Al Value	Write
00114	3		Write
00115	Average Ch 0~3		Write
00121	0		Read
00122	1		Read
00123	2	- Open-Circuit Flag (Burnout)	Read
00124	3	_	Read

Address (0X):

00131	0		Read
00132	1		Read
00133	2	High Alarm Flag	Read
00134	3		Read
00135	Average Ch 0~3		Read
00141	0		Read
00142	1		Read
00143	2	Low Alarm Flag	Read
00144	3		Read
00145	Average Ch 0~3		Read

Address (4X):

Address (4X)	Channel	Description	Attribute
40211		Module Name 1	Read
40212		Module Name 2	Read
40221	All Al	AI Channel Enabled	Read/Write
40303	All DO	DO Value	Read/Write
40001	0		Read
40002	1	-	Read
40003	2	AI Value	Read
40004	3	-	Read
40005	Average Ch 0~3	-	Read
40009-40010	0		Read/Write
40011~40012	1	Pulse Output	Read/Write
40013~40014	2	Low Level Width	Read/Write
40015~40016	3		Read/Write
40017-40018	0		Read/Write
40019~40020	1	Pulse Output	Read/Write
40021~40022	2	High Level Width	Read/Write
40023~40024	3		Read/Write
40025-40026	0		Read/Write
40027~40028	1	Pulse Output Number	Read/Write
40029~40030	2	(0 for continuous output)	Read/Write
40031~40032	3		Read/Write

40033~40034	0	_	Read/Write
40035~40035	1	Set Incremental	Read/Write
40037~40038	2	Pulse Output Number	Read/Write
40037~40040	3		Read/Write
40101~40102	0		Read
40103~40104	1		Read
40105~40106	2	- Al Status	Read
40107~40108	3	-	Read
40111	0		Read
40112	1	-	Read
40113	2	- Historical Maximum ALValue	Read
40114	3		Read
40115	Average Ch 0~3	-	Read
40121	0		Read
40122	1	-	Read
40123	2	- HISTORICAI Minimum AL Value	Read
40124	3		Read
40125	Average Ch 0~3	-	Read
40131~40132	0		Read
40133~40134	1		Read
40135~40136	2	AI Floating Value	Read
40137~40138	3		Read
40139~40140	Average Ch 0~3	-	Read
40151~40152	0		Read
40153~40154	1	Historical Maximum	Read
40155~40156	2	AI Floating Value	Read
40157~40158	3	(IEEE754)	Read
40159~40160	Average Ch 0~3	-	Read
40171~40172	0		Read
40173~40174	1	- Historical Minimum	Read
40175~40176	2	AI Floating Value	Read
40177~40178	3	(IEEE754)	Read
40179~40180	Average Ch 0~3	-	Read
40191	0		Read
40192	1	.	Read
40193	2	Al Value	Read
40194	3	Alter Scaling	Read
40195	Average Ch 0~3	-	Read

40201	0		Read/Write
40202	1		Read/Write
40203	2	Al Type Code**	Read/Write
40204	3	(The type codes of channels for	Read/Write
40205	Average Ch 0~3	average value can't be changed.)	Read

* /	ΑI	Status	(2	Registers)
-----	----	--------	----	------------

Lower Register		Higher Register	
Bit	Description	Bit	Description
0	Fail to Provide AI Value	0	DI triggered to Safety Value
1	Over Range	1	DI triggered to Startup Value
2	Under Range	2	Reserved
3	Open Circuit / Burnout	3	Reserved
4	Reserved	4	Reserved
5	Reserved	5	Reserved
6	Reserved	6	Reserved
7	ADC Initializing/Error	7	Reserved
8	Reserved	8	Reserved
9	Zero/Span Calibration Error	9	Reserved
10	Reserved	10	Reserved
11	Reserved	11	Reserved
12	Reserved	12	Reserved
13	Reserved	13	Reserved
14	Reserved	14	Reserved
15	Reserved	15	Reserved

Type Code	Input Range
0x1080	4~20 mA
0x1082	0~20 mA

Address 0X	Channel	Description	Attribute
00001	0		Read
00002	1		Read
00003	2	Di value	Read
00004	3	-	Read
00017	0		Read/Write
00018	1		Read/Write
00019	2	bo value	Read/Write
00020	3	-	Read/Write
00033	0		Read/Write
00034	1	Counter Status	Read/Write
00035	2	- (0. stop 1: start)	Read/Write
00036	3		Read/Write
00037	0		Write
00038	1	Clear Counter	Write
00039	2	(1: write to clear value)	Write
00040	3		Write
00041	0		Read/Write
00042	1	Clear Overflow	Read/Write
00043	2	auto set to 0 after read)	Read/Write
00044	3		Read/Write
00045	0		Read/Write
00046	1	DI Latch Status	Read/Write
00047	2	0: write to clear latch)	Read/Write
00048	3		Read/Write

A.3 WISE-4050/LAN Modbus Mapping Table

Address 4X	Channel	Description	Attribute
40211	-	Module Name 1	Read
40212	-	Module Name 2	Read
40301	All DI	DI Value	Read
40303	All DO	DO Value	Read/Write
40001~40002	0		Read
40003~40004	1	Counter/Frequency	Read
40005~40006	2	Value	Read
40007~40008	3		Read

40009~40010	0		Read/Write
40011~40012	1	Pulse Output	Read/Write
40013~40014	2	Low Level Width	Read/Write
40015~40016	3		Read/Write
40017~40018	0		Read/Write
40019~40020	1	Pulse Output	Read/Write
40021~40022	2	High Level Width	Read/Write
40023~40024	3		Read/Write
40025~40026	0		Read/Write
40027~40028	1	Set Absolute	Read/Write
40029~40030	2	(0 for continuous output)	Read/Write
40031~40032	3		Read/Write
40033~40034	0		Read/Write
40035~40036	1	Set Incremental	Read/Write
40037~40038	2	Pulse Output Number	Read/Write
40039~40040	3		Read/Write

Address 0X	Channel	Description	Attribute
00001	0		Read
00002	1	Description Attribut DI Value Read Read Read DI Value Read/W Read/W Write Write Write Clear Overflow Read/W Read/W Read/W	Read
00003	2		Read
00004	3		Read
00017	0	Description Attribute DI Value Read Read Read Read Read DO Value Read/Write Read/Write Read/Write DO Value Read/Write Read/Write Read/Write Counter Status (0: stop 1: start) Read/Write Read/Write Read/Write Clear Counter (1: write to clear value) Write Write Write Clear Overflow (1: counter overflow, auto set to 0 after read) Read/Write DI Latch Status (1: DI latched, 0: write to clear latch) Read/Write	Read/Write
00018	1		Read/Write
00019	2		Read/Write
00020	3		Read/Write
00033	0		Read/Write
00034	1	DI Value DI Value Read Read Read Read Read DO Value Read/Write Read/Write Read/Write Read/Write Read/Write Read/Write Read/Write Read/Write Read/Write Counter Status Read/Write (0: stop Read/Write 1: start) Read/Write Read/Write Read/Write (1: write to clear value) Write Write Write U Clear Overflow (1: counter overflow, auto set to 0 after read) Read/Write Read/Write Read/Write	Read/Write
00035	2		Read/Write
00036	3		Read/Write
00037	0		Write
00038	1	Clear Counter	Write
00039	2	Description Attribut Image: Distribution of the second	Write
00040	3		Write
00041	0		Read/Write
00042	1	Description Attrib	Read/Write
00043	2	auto set to 0 after read)	Read/Write
00044	3		Read/Write
00045	0		Read/Write
00046	1	- DI Value R - DO Value R - DO Value R - DO Value R - Counter Status R - (0: stop R - 1: start) R - Clear Counter M - (1: write to clear value) M - Clear Overflow R - Clear Overflow, R - 0: stop R - DI Latch Status R - DI Latch Status R - 0: write to clear latch) R	Read/Write
00047	2	0: write to clear latch)	Read/Write
00048	3		Read/Write

A.4 WISE-4060/LAN Modbus Mapping Table

Address 4X	Channel	Description	Attribute
40211	-	Module Name 1	Read
40212	-	Module Name 2	Read
40301	All DI	DI Value	Read
40303	All DO	DO Value	Read/Write
40001~40002	0		Read
40003~40004	1	Counter/Frequency	Read
40005~40006	2	Value	Read
40007~40008	3		Read

40009~40010	0		Read/Write
40011~40012	1	Pulse Output	Read/Write
40013~40014	2	Low Level Width	Read/Write
40015~40016	3		Read/Write
40017~40018	0		Read/Write
40019~40020	1	Pulse Output	Read/Write
40021~40022	2	High Level Width	Read/Write
40023~40024	3		Read/Write
40025~40026	0		Read/Write
40027~40028	1	Set Absolute	Read/Write
40029~40030	2	(0 for continuous output)	Read/Write
40031~40032	3		Read/Write
40033~40034	0		Read/Write
40035~40036	1	Set Incremental	Read/Write
40037~40038	2	Pulse Output Number	Read/Write
40039~40040	3		Read/Write

A.5 WISE-4012E Wireless Modbus Mapping Table

Address 0X	Channel	Description	Attribute
00001	0		Read
00002	1		Read
00017	0		R/W
00018	1	DO value	R/W
00033	0	Counter Status	R/W
00034	1	(0: stop 1: start)	R/W
00035	0	Clear Counter	Write
00036	1	(1: write to clear value)	Write
00037	0	Clear Overflow	R/W
00038	1	(1: counter overflow,	R/W
	•	auto set to 0 after read)	
00030	0	DLL atch Status	
00039	0	(1: DI latched.	<u>R/W</u>
00040	1	0: write to clear latch)	R/W
00101	0		Write
00102	1	Reset Historical	Write
00103	Average Channel 0~1	Reset Historical Write Maximum Al Value Write	Write
00111	0		Write
00112	1	Reset Historical	Write
00113	Average Channel 0~1	Minimum AI Value	Write
00131	0		Read
00132	1	— High Alarm Flag	Read
00133	Average Channel 0~1		Read
00111	0		Deed
00141	0		Read
00142	1	Low Alarm Flag	Read
00143	Average Channel 0~1		Read
		_	
Address 4X	Channel	Description	Attribute
40211		Module Name 1	Read
40212		Module Name 2	Read

40221

All Al

AI Channel Enable

R/W

1000	
\mathbf{O}	
-	
m	
_	
\sim	
\frown	
\cup	
õ	
\bigcirc	
S	
SD	
SD	
N SN	
N SN	
M sn	
M SN	
s Ma	
us Ma	
us Map	
us Map	
us Map	
us Mapp	
us Mappi	
us Mappii	
us Mappir	
us Mappin	
us Mapping	
us Mapping T	
us Mapping T	
us Mapping Ta	
us Mapping Ta	
us Mapping Tal	
us Mapping Tab	
us Mapping Tab	
us Mapping Tabl	
us Mapping Table	

40301	All DI	DI Value	Read
40303	All DO	DO Value	R/W
40004	0		Deed
40001	0	Al Value	Read
40002	1	(Value Range: 0~10000,	Read
40003	Average Channel 0~1	Value Unit: mV)	Read
40017~40018	0	Counter/Frequency	R/W
40019~40020	1	Value	R/W
	•		
40021~40022	0	Pulse Output	R/W
40023~40024	1	Low Level Width	R/W
40025~40026	0	Pulse Output	R/W
40027~40028	1	High Level Width	R/W
40029~40030	0	Set Absolute	R/W
40031~40032	1	Pulse Output Number	R/W
40033~40034	0	Set Incremental	R/W
40035~40036	1	Pulse Output Number	R/W
10000 10000	•	·	
40101~40102	0		Read
40103~40104	1	AI Status*	Read
40111	0		Read
40112	1	Historical	Read
40113	Average	Maximum AI Value	Read
	Channel 0~1		Read
40121	0		Read
40122	1	Historical Minimum ALValua	Read
40123	Average		Read
	Onanner 0 ² 1		
40131~40132	0		Read
40133~40134	1	AI Floating Value	Read
	Average	(IEEE754)	
40135~40136	Channel 0~1		Read
40151~40152	0		Read
40153~40154	1	Al Floating Value	Read
40155~40156	Average Channel 0~1	(IEEE754)	Read

40171~40172	0		Read
40173~40174	1	Historical Minimum Al Electing Value	Read
40175~40176	Average Channel 0~1	(IEEE754)	Read
40191	0		Read
40192	1	AI Value After Scaling	Read
40193	Average Channel 0~1		Read
40201	0		R/W
40202	1	 AI Type Code^{**} (The type codes of channels for average) 	R/W
40203	Average Channel 0~1	value can't be changed.)	R

* AI Status (2 Registers)

	Lower Register		Higher Register
Bit	Description	Bit	Description
0	Fail to Provide AI Value	0	DI triggered to Safety Value
1	Over Range	1	DI triggered to Startup Value
2	Under Range	2	Reserved
3	Open Circuit / Burnout	3	Reserved
4	Reserved	4	Reserved
5	Reserved	5	Reserved
6	Reserved	6	Reserved
7	ADC Initializing/Error	7	Reserved
8	Reserved	8	Reserved
9	Zero/Span Calibration Error	9	Reserved
10	Reserved	10	Reserved
11	Reserved	11	Reserved
12	Reserved	12	Reserved
13	Reserved	13	Reserved
14	Reserved	14	Reserved
15	Reserved	15	Reserved

** AI Type Code (2 Registers)			
Type Code	Input Range		
0x0148	0~10 V		

A.6 WISE-4012 Wireless Modbus Mapping Table

Address 0X	Channel	Description	Attribute
00001	0		Read
00002	1		Read
00003	2	— Di value	Read
00004	3		Read
00017	0		R/W
00018	1	DO value	R/W
00033	0		R/W
00034	1	(0: stop	R/W
00035	2	1: start)	R/W
00036	3	,	R/W
00037	0		Write
00038	1	Clear Counter	Write
00039	2	(1: write to clear value)	Write
00040	3		Write
00041	0		R/W
00042	1	— (1: counter overflow.	R/W
00043	2	auto set to 0 after read)	R/W
00044	3		R/W
00045	0	— DLL atch Status	R/W
00046	1	— (1: DI latched,	R/W
00047	2	0: write to clear latch)	R/W
00048	3		R/W
00101	0	_	Write
00102	1		Write
00103	2	Reset Historical	Write
00104	3		Write
00105	Average		Write
00111	0		Write
00112	1	_	Writo
00112	2	 Reset Historical	Writo
00114	2	Minimum Al Value	Write
00115	Channel 0~3		Write

00131	0		Read	
00132	1		Read	
00133	2	High Alarm Flag	Read	
00134	3	- Thgh Alann Flag	Read	
00135	Average Channel 0~3		Read	
00141	0		Read	
00142	1		Read	
00143	2		Read	
00144	3	Eow Alaminag	Read	
00145	Average Channel 0~3		Read	
Address 4X	Channel	Description	Attribute	
40211		Module Name 1	Read	
40212		Module Name 2	Read	
40221	All Al	Al Channel Enable	R/W	
40301	All DI	DI Value	Read	
40303	All DO	DO Value	R/W	
40001	0		Read	
40002	1		Read	
40003	1 2		Read	
40004	3	Ai value	Read	
40005	Average Channel 0~1		Read	
40017~40018	0		R/W	
40019~40020	1	Counter/Frequency	R/W	
40021~40022	2	Value	R/W	
40023~40024	3		R/W	
40025~40026	0	Pulse Output	R/W	
40027~40028	1	Low Level Width	R/W	
40029~40030	0	Pulse Output	R/W	
40031~40032	1	High Level Width	R/W	
40033~40034	0	Set Absolute	R/W	
40035~40036	1	Pulse Output Number (0 for continuous output)	R/W	
40007 40000				
40037~40038	0	Set Incremental	K/W	
40039~40040	1	Fuise Output Number	K/W	

	\mathbf{O}
	()
	\frown
	\sim
	P 1
	100
	()
	\smile
	\leq
	()
	~
	\frown
	\bigcirc
	_
	10
	U,
	_
	_
	01
	JU.
	\bigcirc
	\cup
	_
- (
	_
	Ч а
	Tab
	Tab
	Tabl
	Table

40101~40102	0		Read
40103~40104	1		Read
40105~40106	2	- AI Status"	Read
40107~40108	3	_	Read
40111	0		Read
40112	1	_	Read
40113	2	Historical	Read
40114	3	Maximum AI Value	Read
40115	Average Channel 0~3	_	Read
40121	0	_	Read
40122	1		Read
40123	2	Historical	Read
40124	3		Read
40125	Average Channel 0~3		Read
40131~40132	0	_	Read
40133~40134	1		Read
40135~40136	2	Al Floating Value	Read
40137~40138	3	(IEEE754)	Read
40139~40140	Average Channel 0~3		Read
40454 40450	•		Deck
40151~40152	0	_	Read
40153~40154	1	 Historical Maximum 	Read
40155~40156	2	 AI Floating Value 	Read
40157~40158	3	_ (IEEE754)	Read
40159~40160	Average Channel 0~3		Read
401/1~401/2	0	_	Read
40173~40174	1	 Historical Minimum 	Read
40175~40176	2	 AI Floating Value 	Read
40177~40178	3	(IEEE754)	Read
40179~40180	Average Channel 0~3		Read
40191	0	_	Read
40192	1	_	Read
40193	2	Al Value	Read
40194	3	After Scaling	Read
40195	Average Channel 0~3		Read

40231~40232	0		Read
40233~40234	1		Read
40235~40236	2	Al Floating Value	Read
40237~40238	3	(IEEE754)	Read
40239~40240	Average Channel 0~3		Read
40201	0		R/W
40202	1	AI Type Code**	R/W
40203	2	(The type codes of chan-	R/W
40204	3	nels for average value	R/W
40205	Average Channel 0~3	can't be changed.)	R

* AI	Status ((2 R	(eaisters)
	eracae ,		

	Lower Register		Higher Register
Bit	Description	Bit	Description
0	Fail to Provide AI Value	0	DI triggered to Safety Value
1	Over Range	1	DI triggered to Startup Value
2	Under Range	2	Reserved
3	Open Circuit / Burnout	3	Reserved
4	Reserved	4	Reserved
5	Unavailable Channel Configuration	5	Reserved
6	Reserved	6	Reserved
7	ADC Initializing/Error	7	Reserved
8	Reserved	8	Reserved
9	Zero/Span Calibration Error	9	Reserved
10	Reserved	10	Reserved
11	Reserved	11	Reserved
12	Reserved	12	Reserved
13	Reserved	13	Reserved
14	Reserved	14	Reserved
15	Reserved	15	Reserved

Input Type	Input Range	Type Code	
	0~10 V	0x0148	
	0~5 V	0x0147	
Unipolar	0~1 V	0x0145	
voltage	0~500m V	0x0106	
	0~150m V	0x0105	
	+/-10V	0x0143	
D ' 1	+/-5V	0x0142	
Bipolar	+/-1V	0x0140	
voltage	+/-500mV	0x0104	
	+/-150mV	0x0103	
	0~20mA	0x0182	
Current	4~20mA	0x0180	
	+/-20mA	0x0181	
DI Mode	DI	0x01E0	

** AI Type Code (2 Registers)

Address 0X	Channel	Description	Attribute
00001	0		Read
00002	1		Read
00003	2	— Di value	Read
00004	3		Read
00017	0		R/W
00018	1		R/W
00019	2		R/W
00020	3		R/W
			D 44/
00033	0	Counter Status	R/W
00034	1		R/W
00035	2	1: start)	R/W
00036	3		R/W
00037	0		Write
00038	1	 Clear Counter	Write
00039	2	(1: write to clear value)	Write
00040	3		Write
00041	0		R/W
00042	1	(1: counter overflow	R/W
00043	2	auto set to 0 after read)	R/W
00044	3	·····,	R/W
00045	0		R/W
00046	1	DI Latch Status	R/W
00047	2	(1: DI latched,	R/W
00048	3	<u> </u>	R/W

A.7 WISE-4050 Wireless Modbus Mapping Table

Channel	Description	Attribute
-	Module Name 1	Read
-	Module Name 2	Read
All DI	DI Value	Read
All DO	DO Value	R/W
0		Read
1	Counter/Frequency	Read
2	Value	Read
3		Read
	Channel All DI All DO 0 1 2 3	ChannelDescription-Module Name 1-Module Name 2-Module Name 2All DIDI ValueAll DODO Value0Counter/Frequency2Value33

40009~40010	0	Pulse Output	R/W
40011~40012	1		R/W
40013~40014	2	Low Level Width	R/W
40015~40016	3		R/W
40017~40018	0		R/W
40019~40020	1	Pulse Output	R/W
40021~40022	2	High Level Width	R/W
40023~40024	3		R/W
40025~40026	0		R/W
40027~40028	1	Set Absolute	R/W
40029~40030	2	(0 for continuous output)	R/W
40031~40032	3	(*************************	R/W
40033~40034	0		R/W
40035~40036	1	Set Incremental	R/W
40037~40038	2	Pulse Output Number	R/W
40039~40040	3		R/W

Address 0X	Channel	Description	Attribute
00001	0		Read
00002	1		Read
00003	2		Read
00004	3		Read
00005	4		Read
00006	5		Read
00007	6		Read
80000	7		Read
00033	0		R/W
00034	1		R/W
00035	2		R/W
00036	3	(0: stop	R/W
00037	4	1: start)	R/W
00038	5	,	R/W
00039	6		R/W
00040	7		R/W
00041	0		Write
00042	1		Write
00043	2		Write
00044	3	(1: write to clear value)	Write
00045	4		Write
00046	5		Write
00047	6		Write
00048	7		Write
00049	0		R/W
00050	1		R/W
00051	2		R/W
00052	3		R/W
00053	4	auto set to 0 after read)	R/W
00054	5		R/W
00055	6		R/W
00056	7		R/W
	0		
00057	0		R/W
00058	1		R/W
00059	2	DLL atch Status	R/W
00060	3	— (1: DI latched.	R/W
00061	4		R/W
00062	5		R/W
00063	6		R/W
00064	7		R/W

A.8 WISE-4051 Wireless Modbus Mapping Table

01001~01032		Expansion Bit	R/W
05001		Low Battery Status	Read
Address 4X	Channel	Description	Attribute
40211	-	Module Name 1	Read
40212	-	Module Name 2	Read
40301	All DI	DI Value	Read
40001~40002	0		R/W
40003~40004	1		R/W
40005~40006	2		R/W
40007~40008	3	Counter/Frequency	R/W
40009~40010	4	Value	R/W
40011~40012	5		R/W
40013~40014	6		R/W
40015~40016	7		R/W
41001~41032		Expansion Word	R/W
41101~41132		Expansion Bit Error Code	Read
41201~41232		Exapsnion Word Error Code	Read
45101		Data Log Status	Read

Address 0X	Channel	Description	Attribute
00001	0	DI Value	Read
00002	1		Read
00003	2		Read
00004	3		Read
00017	0		R/W
00018	1		R/W
00019	2		R/W
00020	3		R/W
00033	0		D/M/
00033	1	Counter Status	R/W
00035	2	(0: stop	R/W
00036	3	1: start)	R/W
	0		
00037	0		Write
00038	1	Clear Counter	Write
00039	2	(1: write to clear value)	Write
00040	3		Write
000/1	0		D/M/
00041	1	Clear Overflow	R/W
00042	2	(1: counter overflow,	R/W
00043	3	auto set to 0 after read)	R/W
	•		1 1 4 4
00045	0		R/W
00046	1	DI Latch Status	R/W
00047	2	0: write to clear latch)	R/W
00048	3		R/W

A.9 WISE-4060 Wireless Modbus Mapping Table

Address 4X	Channel	Description	Attribute
40211	-	Module Name 1	Read
40212	-	Module Name 2	Read
40301	All DI	DI Value	Read
40303	All DO	DO Value	R/W
40001~40002	0		Read
40003~40004	1	Counter/Frequency	Read
40005~40006	2	Value	Read
40007~40008 3			Read

40009~40010	0		R/W
40011~40012	1	 Pulse Output	R/W
40013~40014	2	Low Level Width	R/W
40015~40016	3		R/W
40017~40018	0		R/W
40019~40020	1	Pulse Output	R/W
40021~40022	2	High Level Width	R/W
40023~40024	3	_	R/W
40025~40026	0		R/W
40027~40028	1	Set Absolute	R/W
40029~40030	2	(0 for continuous output)	R/W
40031~40032	3	_(,,,,,,,,,	R/W
40033~40034	0		R/W
40035~40036	1	Set Incremental	R/W
40037~40038	2	Pulse Output Number	R/W
40039~40040	3		R/W



REST for WISE-4000 Series

B.1 Introduction

REpresentational State Transfer (REST) is a design style of software architecture for Web application behaves and services including image indication, resource request and response and message delivery. It can be developed compatible with popular protocols or standards like HTTP, URI, JSON, HTML. With the advantage of scalability, simplicity and performance, it's already adopted in Web service by Amazon, Yahoo. The Web service of is developed based on HTML5 language, if user need to integrate this into other Web services, the following information/command list should be referred for implementation.

B.2 REST Resources for WISE-4000 Series

B.2.1 Digital Input

B.2.1.1 /di_value/slot_index/ch_num

Description	Retrieves information about the digital input value resource on specific slot.
URL Structure	http://10.0.0.1/di_value/slot_index http://10.0.0.1/di_value/slot_index/ch_num
HTTP Method	GET:Returns the representation of all of digital input value resource. PUT:Replace all of digital input value resource PATCH:Apply partial modifications to digital input value resource.

	Multiple Channel Request: GET /di_value/slot_index Single Channel Request: GET /di_value/slot_index/ch_num
	[Example]
	Request: GET /di_value/slot_0
	Content-type: application/json Response: 200 OK
GET	Response: 200 OK { "DIVal": [{ "Ch":0, "Md":0, "Stat":1, "Val":1, "Ch":0, "OVLch": 0 }, { "Ch":1, "Md":0, "Stat":0, "Val":0, "Stat":0, "OVLch": 0 }, { "Ch":2, "Md":1, "Stat":0, "Val":3378, "Cnting":1, "Stat":0, "Vulch": 0 }, { "Ch":3, "Md":0, "OVLch": 0 }, { "Cht":1, "Md":1, "Stat":0, "Val":3378, "Cnting":1, "Chting":0, "OVLch": 0 }, { "Cht":2, "Md":1, "Stat":0, "Val":3378, "Cnting":1, "Chting":0, "OVLch": 0 }, { "Cht":3, "Md":3, "Stat":0, "Val":1, "Chting":0, "OVLch": 0 }, { "Chting:0, "OvLch": 0 }, { "Chting:0, "OvLch": 0 }, { "Chting:0, "OvLch": 0 }, { "Chting:0, "OvLch": 0 }, { "Chting:0, "OvLch": 0 }, } } Request : GET /di_value/slot_0/ch_2 Content-type: application/json Response: 200 OK { } }
	¹ "Ch":2, "Md":0, "Stat":1, "/(ch":4
	"Val":1, "Cnting":0, "ClrCnt":0, "OvLch": 0
	13

	-
	Single/Multiple Channel Request: PUT /di_value/slot_index Single Channel Request: PUT /di_value/slot_index/ch_num
	[Example]
	Request: PUT /di_value/slot_0
	Content-type: application/json
	"DIVal": [
PUT	<pre>{ "Ch":0, "Md":0, "Stat":0, "Val":0, "Crting":0, "CirCnt":0, "OvLch": 0 }, { {</pre>
	}
	Response: 200 OK
	Request: PUT /di_value/slot_0/ch_2
	Content-type: application/json { "Ch":2, "Md":1, "Stat":0, "Val":3378, "Cnting":0, "ClrCnt":1, "OvLch": 0 }
	Response: 200 OK



■ JSON array name definition:

Field	Abbreviation	Data Type
Array of Digital input configurations	DIVal	Array

	\triangleright
	5
	\mathbf{O}
Ĩ	Ο
	Φ
	\times
	ω
	π
	m
	S
	-
	for
	\leq
	\leq
	$\overline{\mathbf{n}}$
	Ņ
	4
	0
	Q
	0
	ഗ
	Ō
	Ξ.
	Φ
	0

Field	Abbreviation	Data Type	Property	Description	
Channel Number	Ch	Number	R	0, 1,: Digital inpu	ut channel number.
				Digital input mode.	
				0 DI	
				1 Counter	
Mode	Md	Number	R	2 LowToHig	hLatch
				3 HighToLo	wLatch
				4 Frequency	y
Signal Logic Status	Stat	Number	R	1 0: Input signal is	Logic High or Low
Olghai Eogle Olatus	Oldi	Number	K	DI measurement da	
				Dimododiomonia	
				Input Mode	Value Description
				DI	Logic Status of DI
				Counter	Counter Value
Channel) (alua) (= l	Numerican	P	LowToHighLatch	Logic status of DI
Channel value	vai	Number	ĸ	HighToLowLatch	: Digital input channel number. input mode. DI Counter LowToHighLatch HighToLowLatch Frequency put signal is Logic High or Low. Isurement data Mode Value Description Logic Status of DI Pr Counter Value HighLatch Logic status of DI DLOWLatch LOGIC STATUS TO COUNTING TO COUN
				Frequency	Frequency(unity 0.1 Hz)
				Start/Stop counter o	counting
Start Counter	Cnting	Number	RW	Read 1 : counter is count 0 : not counting Write 1 : start counting 0 : stop counting	ing
Clear Counter	ClrCnt	Number	W	1 : Clear the counter	er value
Get/Clear Counter Overflow or Latch Sta- tus	OvLch	Number	RW	counter overflow or Read 1 : overflow/latch or 0 : no overflow or la Write 0 : clear the overflo	latch status ccurred. atch

Resource value definitions:

B.2.2 Digital Output

B.2.2.1 /do_value/slot_index/ch_num

Description	Retrieves information about the digital output value resource on specific slot.
URL Structure	http://10.0.0.1/do_value/slot_index http://10.0.0.1/do_value/slot_index/ch_num
HTTP Method	GET:Returns the representation of all of digital output value resource. PUT:Replace all of digital output value resource PATCH:Apply partial modifications to digital output value resource.

	Multiple Channel Request:
	GET /do_value/slot_index
	Single Channel Request:
	GET /do value/slot index/ch num
	[Evennle]
	[Example]
	Request: GET /do_value/slot_0
	Content-type: application/json
	Response: 200 OK
	{
	"DOVal": [
	{
	"Ch":0.
	"Md":0.
	"Stat"-1
	"\/o "·1
	"DeCto"-0
	F SO(11.0,
	PSIV": 0
	<pre>},</pre>
	{
	"Ch":1,
	"Md":0,
	"Stat":0,
	"Val":0,
	"PsCtn":0.
	"PsStop":0
	"PsI//"· 0
	<u>};</u> {
CET	
GET	
	"Ma":1,
	"Stat":1,
	"Val":3378,
	"PsCtn":0,
	"PsStop":0,
	"PsIV": 0
	},
	"Ch":3,
	"Md":3.
	"Stat" 1
	"\/al"·1
	"PsCtn"·0
	"PsSton":0
	}
	}
	Request : GET /do_value/slot_0/ch_2
	Content-type: application/json
	Response: 200 OK
	{
	"Ch":2,
	"Stat":1
	"\/al"·1
	"DeSton":0
	PSIV : U
1	}

PUT Single/Multiple Channel Request: PUT //do_value/slot_index/ch_num [Example] Request: PUT //do_value/slot_0 Content-type: application/json {		
PUT /do_value/slot_index Single Channel Request: PUT /do_value/slot_index/ch_num [Example] Request: PUT /do_value/slot_0 Content-type: application/ison {		Single/Multiple Channel Request:
PUT Single Channel Request: PUT //do_value/slot_0 Request: PUT //do_value/slot_0 Content-type: application/son {		PUT /do_value/slot_index
PUT /do_value/slot_index/ch_num [Example] Request: PUT /do_value/slot_0 Content-type: application/son { {		Single Channel Request:
PUT [Example] Request: PUT /do_value/slot_0 Content-type: application/json { 		PUT /do_value/slot_index/ch_num
PUT Request: PUT /do_value/slot_0 Content-type: application/json {		[Evenne]
PUT Request: PUT / do_value/slot_0 Content-type: application/json { 		[Example]
PUT PUT Content-type: application/json { "DOVal": { {		Request: PUT /do_value/slot_0
PUT "DOVal": [* Ch*:0, "Md*:0, * "Stat":1, "Val":0, * "PsCin":0, "PsStop":0, * "PsStop":0, "PsStop":0, * "Pstop:0, "Pstop:0,		Content-type: application/json
PUT PUT		"DOVal": [
PUT ************************************		{
PUT "Martin, "'Nal'i,		"Ch":0,
<pre>"Stat":1, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Stat":0, "Stat":0, "Stat":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor":0, "Pastor:0, "Pastor":0, "Pastor:0</pre>		"Md":0,
PUT "Val':1, "PSStop":0, "PSStop":0, "PSIV": 0 }, { "Ch':1, "Md':0, "Stat":0, "Val':0, "PSStop":0,		"Stat":1,
PUT "PsCh":0, "PsStop":0, "PsIV":0 } ("Ch":1, "Md":0, "Stat":0, "PsStop:"0, "PsStop:"0		"Val":1,
PUT "PsiV": 0 } ('Ch":1, "Ma":0, "Psite":0, "Psite":0, "Psite":0, "Psite":1, "Ma":1, "Stat":1, "Stat":1, "Psite":0 }, ("Ch":2, "Ma":3, "Psite":0, "Psite":		"PsCtn":0,
PUT		
PUT (((((((((((((((((((F 51 V . U
PUT		
PUT "Nai":0, "PsStop":0, "PsStop":0, "PsStop":0, "PsStop":0, "Ndi":1, "Ndi":1, "Stat":1, "Val":3378, "PsStop":0,		"Ch":1,
PUT "Stat":0, "Val":0, "PSCtn":0, "PSStop":0, "PSIV": 0 }, { "Ch":2, "Md":1, "Stat":1, "Val":3378, "PSCtn":0, "PSStop":0,		"Md":0,
PUT "PSCIn':0, "PSStop':0, "PSIV:: 0 }, { "Ch":2, "Md":1, "Stat':1, "Val':3378, "PSCIn':0, "PSIV:: 0 }, { "Ch":3, "Md":3, "Stat':1, "Val':3, "Md":3, "Stat':1, "Val':1, "PSCIn':0, "PSIV:: 0 } Response: 200 OK Request: PUT /do_value/slot_0/ch_2 Content-type: application/json { "Ch":2, "Md":2, "Stat':0, "PSIV:: 0 } Response: 200 OK		"Stat":0,
PUT "PSCIn":0, "PSUN": 0 }, { Ch":2, "Md":1, "Stat":1, "Val":3378, "PSCIn":0, "PSStop":0, "PsStop":0, "PsStop":0, "PsIV": 0 }, { ("Ch":3, "Md":3, "Stat":1, "Val":1, "PSCIn":0, "PsStop":0, "PsS		"Val":0,
PUT PUT		"PsCtn":0,
PUT , ("Ch":2, ,"Md":1, ,"Stat":1, ,"Val":3378, ,"PsCtn":0, ,"PsStop":0, ,"FsStop":0, ,"Stat":1, ,"Val":1, ,"Val":1, ,"Val":1, ,"PsStop":0, ,"PsStop:0, ,"Ps		"Pslv": 0
PUT		},
PUT "Ch":2, "Md":1, "Stat":1, "Val":3378, "PsCtn":0, "PsStop":0, "Stat":1, "Val":1, "Val":1, "Val":1, "Val":1, "PsCtn":0, "PsStop":0, "PsStop":0, "PsStop":0, "PsStop":0, "PsStop":0, "PsStop":0, "PsStop":0, "PsStop":0, "Stat":1, "Ch":2, "Md":2, "Stat":0		
PUT "Md":1, "Stat":1, "Val":3378, "PSCh":0, "PSStop":0, "PsIV": 0 }, {		"Ch":2,
PU1	лит	"Md":1,
<pre>value (value) "PsCtn":0, "PsStop":0, "PsIV": 0 }, {</pre>	PUI	"Stat":1, "\/a "·3378
<pre>"PsStop":0, "PsStop":0, "PstV": 0 }, {</pre>		"PsCtn":0
<pre>"PsiV": 0 }, { "Ch":3, "Md":3, "Stat":1, "Val":1, "PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK Request: PUT /do_value/slot_0/ch_2 Content-type: application/json { "Ch":2, "Md":2, "Stat":0, "PsCtn":0, "PsStop":0, "PsStop:0, "PsStop:0, "PsStop:0,</pre>		"PsStop":0,
<pre> } { "Ch":3, "Md":3, "Stat":1, "Val":1, "PsStop":0, "PsStop":0, "PsIV": 0 } } Response: 200 OK Request: PUT /do_value/slot_0/ch_2 Content-type: application/json { "Ch":2, "Md":2, "Stat":0, "Val":0, "PsCtn":0, "PsCtn":0, "PsStop":0, "PsStop":0, "PsStop":0, "PsStop":0, "PsStop":0, "PsStop":0, "PsStop":0, "PsIV": 0 } Response: 200 OK</pre>		"PsIV": 0
<pre>{ "Ch":3, "Md":3, "Stat":1, "Val":1, "PsStop":0, "PsStop":0, "PsIV": 0 }] } Response: 200 OK Request: PUT /do_value/slot_0/ch_2 Content-type: application/json { "Ch":2, "Md":2, "Stat":0, "PsCtn":0, "PsStop":0, "Stat":0, "Stat":0, "Stat":0, "PsStop:0, "Tstat":0, "PsStop:0, "Tstat":0, "Ts</pre>		},
Cont 3, "Md":3, "Stat":1, "Val":1, "PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK Request: PUT /do_value/slot_0/ch_2 Content-type: application/json { "Ch":2, "Md":2, "Stat":0, "PsCtn":0, "PsStop":0, "PsStop":0, "PsIV": 0 } Response: 200 OK		
<pre>"Nut :0, "Stat":1, "Val":1, "PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK Request: PUT /do_value/slot_0/ch_2 Content-type: application/json {</pre>		"Un :3, "Md"·3
"Val":1, "PsCtn":0, "PsStop":0, "PsStop":0, "PsIV": 0 } Response: 200 OK Request: PUT /do_value/slot_0/ch_2 Content-type: application/json { "Ch":2, "Md":2, "Stat":0, "Val":0, "PsCtn":0, "PsStop":0, "PsStop":0, "PsStop":0 } Response: 200 OK		"Stat":1.
<pre>"PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK Request: PUT /do_value/slot_0/ch_2 Content-type: application/json {</pre>		"Val":1,
"PsStop":0, "PsIV": 0 }] Response: 200 OK Request: PUT /do_value/slot_0/ch_2 Content-type: application/json { "Ch":2, "Md":2, "Stat":0, "Val":0, "PsCtn":0, "PsStop":0, "PsStop":0, "PsIV": 0 } Response: 200 OK		"PsCtn":0,
"PsIV": 0 } Response: 200 OK Request: PUT /do_value/slot_0/ch_2 Content-type: application/json { "Ch":2, "Md":2, "Md":2, "Stat":0, "Val":0, "PsCtn":0, "PsStop":0, "PsStop":0, "PsIV": 0 } Response: 200 OK		"PsStop":0,
<pre> }] } Response: 200 OK Request: PUT /do_value/slot_0/ch_2 Content-type: application/json { "Ch":2, "Md":2, "Stat":0, "Val":0, "PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK</pre>		"Psiv": 0
<pre> } Response: 200 OK Request: PUT /do_value/slot_0/ch_2 Content-type: application/json { "Ch":2, "Md":2, "Stat":0, "Val":0, "PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK</pre>		
Response: 200 OK Request: PUT /do_value/slot_0/ch_2 Content-type: application/json { "Ch":2, "Md":2, "Stat":0, "Val":0, "PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK		}
Response: 200 OK Request: PUT /do_value/slot_0/ch_2 Content-type: application/json { "Ch":2, "Md":2, "Stat":0, "Val":0, "PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK		
Request: PUT /do_value/slot_0/ch_2 Content-type: application/json { "Ch":2, "Md":2, "Stat":0, "Val":0, "PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK		Response: 200 OK
Content-type: application/json { "Ch":2, "Md":2, "Stat":0, "Val":0, "PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK		Request: PUT /do_value/slot_0/ch_2
{ "Ch":2, "Md":2, "Stat":0, "Val":0, "PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK		Content-type: application/json
"Ch":2, "Md":2, "Stat":0, "Val":0, "PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK		{
"Stat":0, "Val":0, "PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK		Un :2, "Md"-2
"Val":0, "PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK		"Stat":0.
"PsCtn":0, "PsStop":0, "PsIV": 0 } Response: 200 OK		"Val":0,
"PsStop":0, "PsIV": 0 } Response: 200 OK		"PsCtn":0,
"PsIV": 0 } Response: 200 OK		"PsStop":0,
} Response: 200 OK		"PsIV": 0
Response: 200 OK		}
		Response: 200 OK

РАТСН	Single/Multiple Channel Request: PATCH /do_value/slot_index Single Channel Request: PATCH /do_value/slot_index/ch_num [Example] Request: PATCH /do_value/slot_0 Content-type: application/json { "DOVal": [{ "Ch":2, "Md": 2 }, { "Ch":3, "PsStop":1 }
	}
	Kesponse: 200 OK
	Request: PATCH /do_value/slot_0/ch_3
	Content-type: application/json
	י"Ch":3,
	"PsCtn":1
	ſ
	Response: 200 OK
JSON array nar	ne definition:
Field	Abbreviation Data Type

Field	Abbreviation	Data Type
Array of Digital input configurations	DOVal	Array

Field	Abbreviation	Data Type	Property	Description
Channel Number	Ch	Number	R	0, 1,: Digital output channel number.
Mode	Md	Number	R	Digital output mode.
				0 DO
				1 Pulse Output
				2 LowToHighDelay
				3 HighToLowDelay
Signal Logic Status	Stat	Number	R	1, 0: Output signal is Logic High or Low.
Channel Value	Val	Number	RW	DO measurement data Output Mode Value Description DO Get the current signal status or set its status Pulse Output Get or set the absolute pulse count value LowToHighDelay Get the current signal status or set its status HighToLowDelay Get the current signal status or set its status
Pulse Output Continue State	PsCtn	Number	RW	1 / 0: Pulse outputting is continuous or not.
Stop Pulse Output	PsStop	Number	W	1: Stop the pulse outputting. (Continue is disabled, Absolute and incremental values are reset to zero. DO signal status is set to logic low.)
Incremental Pulse Out- put Value	PsIV	Number	RW	Incremental Pulse Output Value

Resource value definitions:

B.2.3 Analog Input

B.2.3.1 /ai_value/slot_index/ch_num

Description	Retrieves information about the analog input value resource on specific slot.
URL Structure	http://10.0.0.1/ai_value/slot_index http://10.0.0.1/ai_value/slot_index/ch_num
HTTP Method	GET:Returns the representation of all of analog input value resource. PUT:None PATCH:Apply partial modifications to analog input value resource.
	Multiple Channel Request:
-----	---------------------------------
	GET /ai value/slot index
	Single Channel Beginnet
	Single Chainer Request.
	GET /ar_value/slot_index/ch_num
	[Example]
	Request: GET /ai value/slot 0
	Content-type: application/json
	Response: 200 OK
	{
	"AlVal": [
	"En":1,
	"Rng":328,
	"Val":148,
	"Ea":650.
	"Evt".0
	"Hvar":190,
	"HEg":1250,
	"LVal":15,
GET	"LEa":500.
	"SVal"-148
	},
	"Ch":1,
	"En":1,
	"Rng":328,
	"Val":0.
	"Ea":0
	 "Ex#"-0
	"HIA-:0,
	"HVal":0,
	"HEg":0,
	"LVal":0,
	"LEa":0.
	CITE : U
	},
	"Ch":2,
	"En":1,

	-
	"Rng":328,
	var.o, "Eq":0,
	"Evt":8,
	"LoA":0, "Hia":0
	"HVa!":0,
	"HEg":0,
	"LVal":0, "L Ea":0
	"SVal":0,
	"CirH": 0,
	- "CITL": 0 }.
	{
	"Ch":3, "Eo":4
	"Rng":328,
	"Val":0,
	"Eg":0, "Ev#"·0
	"LoA":0,
	"HiA":0,
	"HEa":0.
	"LVal":0,
	"LEg":0, "St/st":0
	"CirH": 0.
	"CIrL": 0
	}, {
	"Ch":4,
	"En":1,
	"Kng":328, "Val":0.
	"Eg":0,
	"Evt":0,
	"HiA":0.
	"HVal":0,
	"HEg":0, "I.Va":0
	"LEg":0,
	"SVal":0,
	"Cirl": 0, "Cirl ": 0
	}
	}
	Request : GET /ai_value/slot_0/ch_2
	Content-type: application/ison
	Response: 200 OK
	{ "Ch":2
	"En":1,
	"Rng":328,
	"Val":0, "Ea":0
	"Evt":8,
	"LoA":0,
	пи :0, "HVal":0.
	"HEg":0,
	"LVal":0,
	"SVal":0,
	"ClrH": 0,
	"CirL": 0
PUT	None

	Single/Multi Channel Request: PATCH /ai_value/slot_index Single Channel Request: PATCH /ai_value/slot_index/ch_num [Example] Request: PATCH /ai_value/slot_0
PATCH	Content-type: application/json [*] AlVal": [[*] Ch":2, [*] LoA": 0 }, [*] Ch":3, [*] HiA":0 } Response: 200 OK Request: PATCH /ai_value/slot_0/ch_3 Content-type: application/json [*] LoA":0 } Response: 200 OK

■ JSON array name definition:

Field	Abbreviation	Data Type
Array of Analog input configurations	AIVal	Array

Resource value	definitions (Total chan	inels = A	Al channel number + 1 average
Field	Abbreviation	Data Type	Property	Description

Field	Abbreviation	Data Type	Property	Description
Channel Number	Ch	Number	R	0, 1,: Analog input channel number. Note for the average channel: The average channel number for a 4-ch Al module is 4.
Input Range	Rng	Number	R	Analog input range. Range code 328 (0x0148) 0 - 10 V 259 (0x0103) +/- 150 mV 260 (0x0104) +/- 500 mV 320 (0x0140) +/- 1 V 321 (0x0141) +/- 2.5 V 322 (0x0142) +/- 5 V 323 (0x0143) +/- 10 V 327 (0x0147) 0 ~ 5 V 384 (0x0180) 4 ~ 20 mA 385 (0x0181) +/- 20 mA 386 (0x0182) 0 ~ 20 mA 65535 Invalid range, if average channel is disable
Channel Enable	En	Number	R	1 / 0: Enable / Disable AI conversion Notice: Average channel is read only. When channel mask of average is not 0, the value is 1.
Channel Raw Value	Val	Number	R	0 ~ 65535:AI measurement data (Raw data)
Channel Engi- neering data	Eg	Number	R	Al engineering data, the value is $1/1000$ scale. For example, $1630 \rightarrow 1.63$
Channel Event Status	Evt	Number	R	AI statuses
Low Alarm Status	LoA	Number	RW	Low alarm status Read 1 : low alarm occurred. 0 : not occurred Write 0 : clear the low alarm status
High Alarm Status	HiA	Number	RW	High alarm status Read 1 : high alarm occurred. 0 : not occurred Write 0 : clear the high alarm status
Maximum Al Raw Value	HVal	Number	R	AI max. measurement data (Raw data)

Maximum Al Engineering data	HEg	Number	R	Al max. engineering data, the value is 1/1000 scale For example,
				10200→10.2
Minimum Al Raw Value	LVal	Number	R	AI min. measurement data (Raw data)
Minimum Al Engineering data	LEg	Number	R	Al min. engineering data, the value is 1/1000 scale For example, $250 \rightarrow 0.25$
Channel Raw Value After Scal- ing	SVal	Number	R	0 ~ 65535 : AI measurement data (Raw data) after scaling
Clear Maximum Al Value	ClrH	Number	W	1 : Clear the Maximum AI value
Clear Minimum Al Value	ClrL	Number	W	1 : Clear the Minimum AI value
Physical value after scaling	PEg	Number	R	Al physical value after scaling, the value is 1/ 1000 scale For example: 150350'150.35
Mapping unit	Uni	String	R	Unit for mapping value Max. 32 characters

	* AI	Status (2 Registers)	
	Lower Register		Higher Register
Bit	Description	Bit	Description
0	Fail to Provide AI Value	0	DI triggered to Safety Value
1	Over Range	1	DI triggered to Startup Value
2	Under Range	2	Reserved
3	Open Circuit / Burnout	3	Reserved
4	Reserved	4	Reserved
5	Unavailable Channel Configuration	5	Reserved
6	Reserved	6	Reserved
7	ADC Initializing/Error	7	Reserved
8	Reserved	8	Reserved
9	Zero/Span Calibration Error	9	Reserved
10	Reserved	10	Reserved
11	Reserved	11	Reserved
12	Reserved	12	Reserved
13	Reserved	13	Reserved
14	Reserved	14	Reserved
15	Reserved	15	Reserved

B.2.4 RS-485 Port Expansion Data

B.2.4.1 Expansion Bit Data

/expansion_bit/com_x/ch_num

Description	Retrieves information about the expansion tag bit data resource, the data information is defined by user configuration
URL Structure	http://10.0.0.1/expansion_bit/com_x http://10.0.0.1/expansion_bit/com_x /ch_num where x = 1 ~ : the identifier of COM number where num = 0 ~ : the channel number
HTTP Method	GET: Returns the representation of all of expansion bit data resource. PUT: None PATCH: Apply partial modifications to expansion bit data resource.

	Multi-Channel Request? GET /expansion_bit/com_x Single Channel Request? GET /expansion_bit/com_x/ch_num
	[Example]: ■ Request : GET /expansion_bit/com_1/
	Content-type: application/json Response: 200 OK
	{ "ExpBit": [{ { "Chillion
	"Cn::0, "Val":1, "Evt":0,
	"SID '1, "Addr":1, "MAddr":1001,
	<pre>vvevi :0 }, { "Cb":1</pre>
	"Val":0, "Evt":0, "SID":1
	"Addr":2, "MAddr":1002, "WEvt":0
	}, { "Ch":2,
	"Val":1, "Evt":0, "SID":1,
	"Addr":3, "MAddr":1003, "WEvt":0
	}, { "Ch":3, "Val":1
GET	"Evt":0, "SID":1, "Addr":4.
	"MAddr":1004, "WEvt":0 },
	{ "Ch":4, "Val":1,
	"Evt":0, "SID":2, "Addr":1,
	"WEvt":0 },
	{ "Ch":31, "Val":0.
	"Evt":0, "SID":3, "Addr":17,
	"MAddr":1032, "WEvt":0 }
] }
	Content-type: application/ison
	Response: 200 OK { "Ch":2,
	"Val":1, "Evt":0, "SID":1,
	"Adar":3, "MAddr":1003, "WEvt":0
	}

Field		Abbreviation		Data Type
Array of Analog inp	out configurations	ExpBit		Array
esource valu	e definitions:			
Field	Abbreviations	Data type	Property	Description
Channel Number	Ch	Number	R	0, 1,: expansion tag data channel number
Channel Value	Val	Number	R/W	The channel value of expansion tag data Value: 0/1 *After writing action, user must poll the "expansion bit writing status" to get process result
				The channel error code of expansion tag data (TBD) Modbus exception code Bit 7: Write only mask Event Value Description (Bit: 6~0)
		Number		0 (0x00) No error
				1 (0x01) Illegal function
				2 (0x02) Illegal data address
				3 (0x03) Illegal data value
				4 (0x04) Slave device failure
				5 (0x05) Acknowledge
				6 (0x06) Slave device busy
Channel Error	Evt		R	7 (0x07) Negative acknowledge
Code			ĸ	8(0x08) Memory parity error
				9 (0x09) Reserved
				10 (0x0A) Gateway path unavailable
				11 (0x0B) Gateway target device failed to respond
				12 ~15 Reserved
				16 (0x10) Unavailable
				17 (0x11) Slave response timeout
				18 (0x12) Checksum error
				19 (0x13) Reserved data error
				20 (0x14) Send request fail
				21 (0x15) Unprocessed
				22 (0x16) Read only
				23 (0x17) In processing
Slave ID	SID	Number	R	Modbus RTU slave ID 0~255
Slave Modbus Address	Addr	Number	R	Modbus RTU Slave device polling address: 1-9999
Modbus TCP Mapping Address	MAddr	Number	R	Modbus TCP mapping address of expansion value:1-999

Field	Abbreviations	Data type		Property		
	·		The status f	The status for preview writing action.		
			Event Value (Bit: 6~0)	Description		
			0 (0x00)	No error		
			1 (0x01)	Illegal function		
			2 (0x02)	Illegal data address		
			3 (0x03)	Illegal data value		
			4 (0x04)	Slave device failure		
			5 (0x05)	Acknowledge		
			6 (0x06)	Slave device busy		
			7 (0x07)	Negative acknowledge		
Evenning hit			8(0x08)	Memory parity error		
writing status	WEvt	Number	9 (0x09)	Reserved		
			10 (0x0A)	Gateway path unavailable		
			11 (0x0B)	Gateway target device failed to respond		
			12 ~15	Reserved		
			16 (0x10)	Unavailable		
			17 (0x11)	Slave response timeout		
			18 (0x12)	Checksum error		
			19 (0x13)	Reserved data error		
			20 (0x14)	Send request fail		
			21 (0x15)	Unprocessed		
			22 (0x16)	Read only		
			23 (0x17)	In processing		
Demortor			*Event value status later.	e 0x17: the writing process is not finish, user s	should poll the	

B.2.4.2 Expansion Word Data

/expansion_word/com_x/ch_num

Description	Retrieves information about the expansion tag bit data resource, the data information is defined by user configuration
URL Structure	http://10.0.0.1/expansion_word/com_x http://10.0.0.1/expansion_word/com_x/ch_num where x = 1 ~ : the identifier of COM number where num = 0 ~ : the channel number
HTTP Method	GET: Returns the representation of all of expansion bit data resource. PUT: None PATCH: Apply partial modifications to expansion bit data resource.

	Multi-Channel Request?
	Single Channel Request?
	GET /expansion_word/com_x/ch_num
	[Example]:
	Request : GET /expansion_word/com_1
	Content-type: application/json
	{
	"ExpWord": [
	¹ "Ch":0,
	"Val":32768, "Evt":0
	"SID":1,
	"Addr":1, "MAddr":1001
	"WEvt":0
	- }, - {
	"Ch":1,
	"Val":1235, "Evt":0.
	"SID":1,
	"MAddr":1002,
	"WEvt":0
	}, {
	"Ch":2, "\/al":65535
	"Evt":0,
	"SID":1, "Addr":3
	"MAddr":1003,
	"VVEVt":0 }.
	/ { //
GET	"Val":33358,
GLI	"Evt":0, "SID":1
	"Addr":4,
	"MAddr":1004, "WEvt":0
	},
	{ "Ch":4,
	"Val":4095,
	"SID":2,
	"Addr":211, "Mddrd::1005
	"WEvt":0
	},
	"Val":0,
	"Evt":0, "SID"-2
	"Addr":1,
	"MAddr":1032, "WEvt":0
	}
	}
	Request : GET /expansion_word/com_1/ch_2
	Response: 200 OK
	{ "Ch"·2
	"Val":65535,
	"Evt":0, "SID":1,
	"Addr":3,
	"WEvt":0
	}
1	

Field		Abbreviation		Data Type	
Array of Analog inp	out configurations	ExpWord		Array	
esource valu	e definitions:				
Field	Abbreviations	Data type	Property	Description	
Channel Number	Ch	Number	R	0, 1,: expansion tag data channel number	
Channel Value	Val	Number	R/W	The channel value of expansion tag data Value: 0/1 *After writing action, user must poll the "expansion bit writing status" to get process result	
				The channel error code of expansion tag data (TBD) Modbus exception code Bit 7: Write only mask Event Value Description (Bit: 6~0)	
				0 (0x00) No error	
				1 (0x01) Illegal function	
	Evt			2 (0x02) Illegal data address	
				3 (0x03) Illegal data value	
				4 (0x04) Slave device failure	
				5 (0x05) Acknowledge	
				6 (0x06) Slave device busy	
Channel Error		Number	R	7 (0x07) Negative acknowledge	
Code		Number		8(0x08) Memory parity error	
				9 (0x09) Reserved	
				10 (0x0A) Gateway path unavailable	
				11 (0x0B) Gateway target device failed to respond	
				12 ~15 Reserved	
				16 (0x10) Unavailable	
				17 (0x11) Slave response timeout	
				18 (0x12) Checksum error	
				19 (0x13) Reserved data error	
				20 (0x14) Send request fail	
				21 (0x15) Unprocessed	
				22 (0x16) Read only	
				23 (0x17) In processing	
Slave ID	SID	Number	R	Modbus RTU slave ID 0~255	
Slave Modbus Address	Addr	Number	R	Modbus RTU Slave device polling address: 1-9999	
Modbus TCP Mapping Address	MAddr	Number	R	Modbus TCP mapping address of expansion value:1-999	

Field	Abbreviations	Data type	Property			
			The status for preview writing action.			
			Event Value (Bit: 6~0)	Description		
			0 (0x00)	No error		
			1 (0x01)	Illegal function		
			2 (0x02)	Illegal data address		
			3 (0x03)	Illegal data value		
			4 (0x04)	Slave device failure		
			5 (0x05)	Acknowledge		
			6 (0x06)	Slave device busy		
			7 (0x07)	Negative acknowledge		
For an allow hit			8(0x08)	Memory parity error		
writing status	WEvt	Number	9 (0x09)	Reserved		
-			10 (0x0A)	Gateway path unavailable		
			11 (0x0B)	Gateway target device failed to respond		
			12 ~15	Reserved		
			16 (0x10)	Unavailable		
			17 (0x11)	Slave response timeout		
			18 (0x12)	Checksum error		
			19 (0x13)	Reserved data error		
			20 (0x14)	Send request fail		
			21 (0x15)	Unprocessed		
			22 (0x16)	Read only		
			23 (0x17)	In processing		
			*Event value status later.	e 0x17: the writing process is not finish, user s	should poll the	

B.2.5 Data Logger

B.2.5.1 /log_message

Description	Retrieves the log data in system memory					
	http://10.0.0.1/log_message					
HTTP Method	GET: According to the setting of filtering, server returns the all/partial of logged data.					
GET	Request: GET /log_message [Example]: Request: GET /log_message for WISE-4060/LAN module Content-type: application/json Response: 200 OK { "LogMsg": [{ "PE":128, "TIM":2014-11-11T15:48:32+08:00", "UID":"ADAM-4060/LAN_00DC9FE1601", "MAC":"00-D0-C9-FE-16-01", "Record" : [[0,3,3,1], [0,2.4,150], [0,5,5,250]] }, { "PE":128, "TIM":"2014-11-11T15:49:44+08:00", "UID":"ADAM-4060/LAN_00DDC9FE1601", "MAC":"00-D0-C9-FE-16-01", "MAC":"00-D0-C9-FE-16-01", "Record" : [[0,3,3,0], [0,2.4,140], [0,5,5,240]] , { "PE":128, "TIM":"2014-11-11T15:51:02+08:00", "UID":"ADAM-4060/LAN_00DDC9FE1601", "MAC":"00-D0-C9-FE-16-01", "Record" : [[0,3,3,0], [0,2.4,140], [0,3,3,0], [0,3,3,0], [0,3,3,0], [0,3,3,0], [0,3,3,0], [0,3,0], [0,3,3,0], [0					

Field		Abbreviation		Data Type		
Array of log messages		LogMsg		Array		
Array of I/O r	ecords	Record		Array		
esource valu	ue definitions:					
Field	Abbreviation	s Data type	Property	Description		
Periodic/Event	128	Number	R	Image: New York of the storage 1 DI 2 DO 4 Event from 8 AO 16 WDT 128 Periodic		
Timestamp	ТІМ	String	R	Timestamp of the storage "Coordinated Universal Time (UTC) Ex. "1415757750" corresponds to November 12, 2014, 2:02:30 am, Standard Time. (meanwhile, 2014, 10:02:30 am, Taipei Time.) "Local Date/Time according GMT time zone (ISO 8601) Ex. "1994-11-05T08:15:30-05:00" corresponds to Novem- ber 5, 1994, 8:15:30 am, US Eastern Standard Time.		
UUID	UID	String	R	Universally Unique Identifier (UUID) Max. 32 characters		
	MAG	String	P	MAC address. (12+5) characters, ex. "00-D0-C9-F0-63-F7		

				* The information in array is as follows. [Slot-index, Channel-index, I/O-type-index, I/O-value] * The data type in array is as follows. [Number, Number, Number, Number] Notice: When the I/O-type-index is engineering type (12, 13, 14, 18), the I/O value is 1/1000 scale.		
				Index	Recording I/O-type of the storage	
				0	Invalid	
				1	DI Logic Status	
				2	DI Counter value	
				3	DI Frequency value	
				4	DO Logic Status	
				5	DO Absolute Pulse Output value	
				6	DO Incremental Pulse Output Value	
				7	Al value	
				8	Historical Maximum AI value	
				9	Historical Minimum AI value	
				10	AI value after scaling	
Recording	Record	Array	R	11	AI status flags	
message	Robord		K	12	AI engineering value	
				13	Historical Maximum AI engineering value	
				14	Historical Minimum AI engineering value	
				15	AO value	
				16	AO value after scaling	
				17	AO status flags	
				18	AO engineering value	
				19	Al physical value	
				20	AI engineering value (floating type)	
				21	Historical Maximum AI engineering value (floating type)	
				22	Historical Minimum AI engineering value (floating type)	
				23	AI physical value (floating tpye)	
				30	Expansion bit data	
				31	Expansion bit error code	
				32	Expansion word data	
				33	Expansion word error code	
Remarks				32 33	Expansion word data Expansion word error code	



www.advantech.com

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, electronic, photocopying, recording or otherwise, without prior written permission of the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2015